

TPD.NT72690.PB768 Trouble Shooting

—Power supply

—Display


—Audio

—Function


TV Author : Xu Chengbin
POWER Author : Liu Jie

Checked By :
Checked By :


1. Power circuit diagram

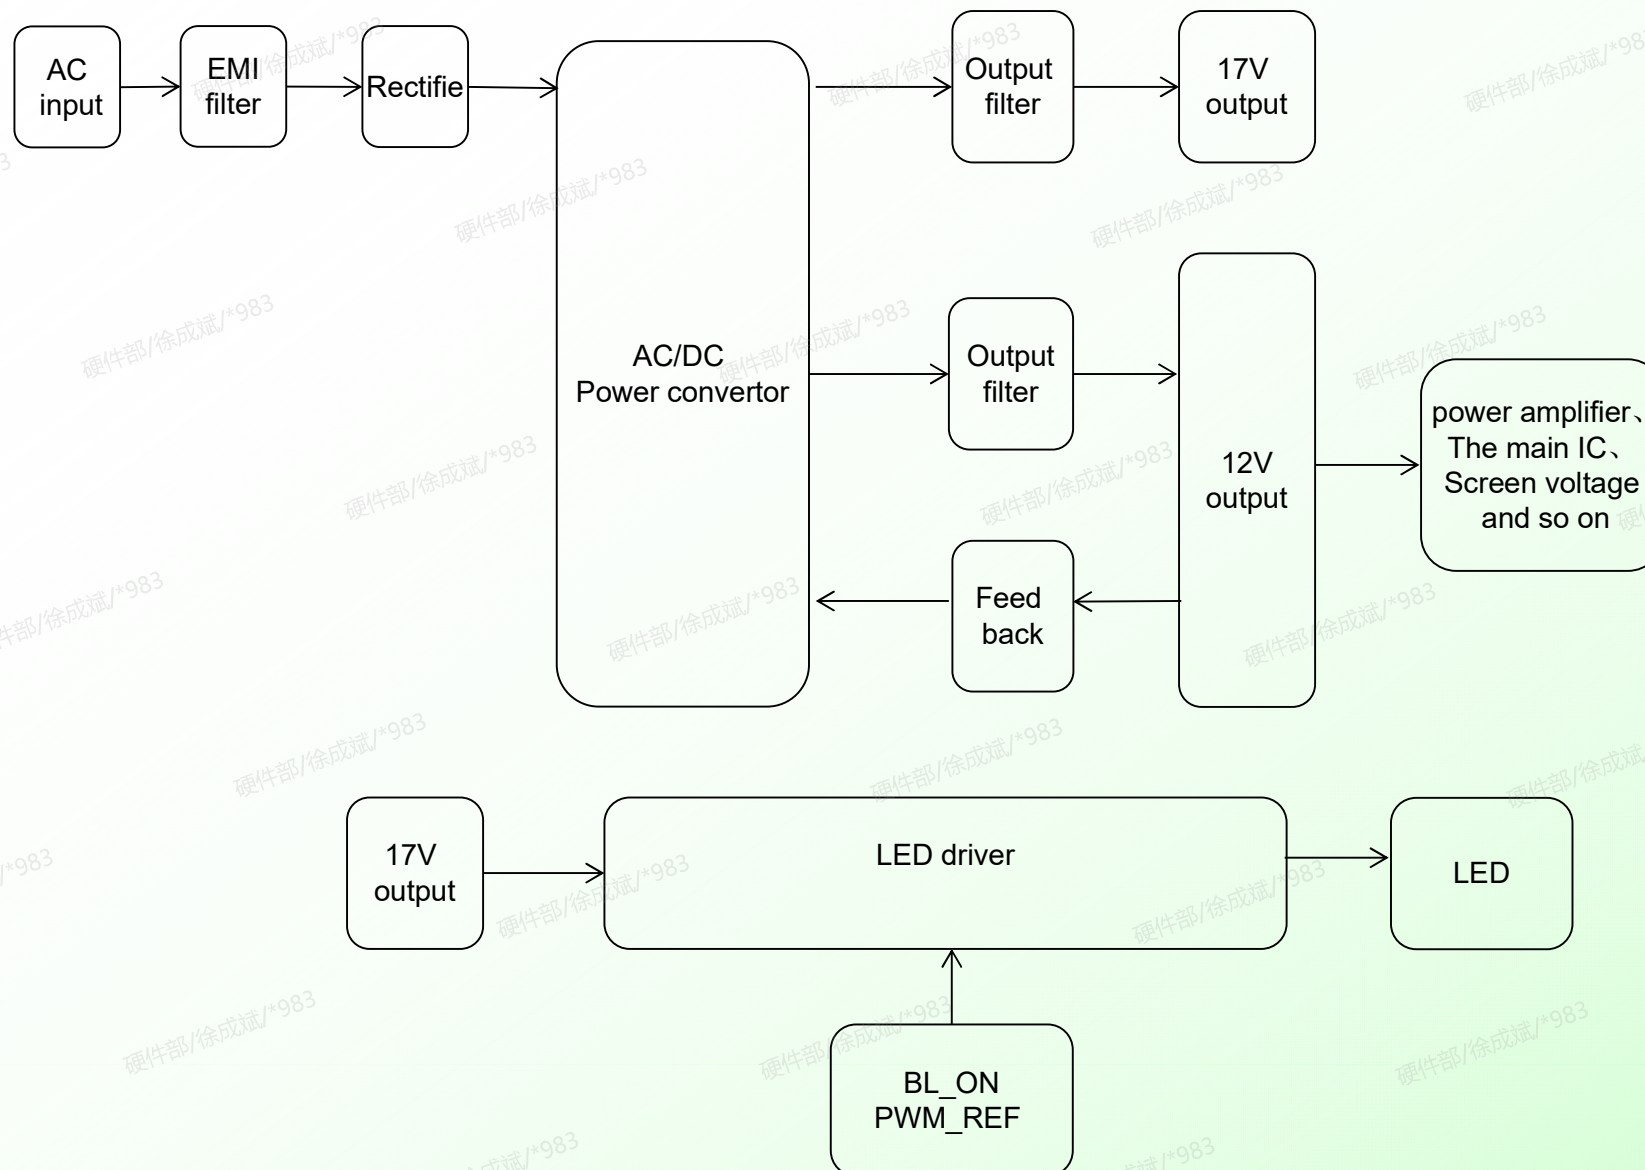


2.Power Supply Trouble 1

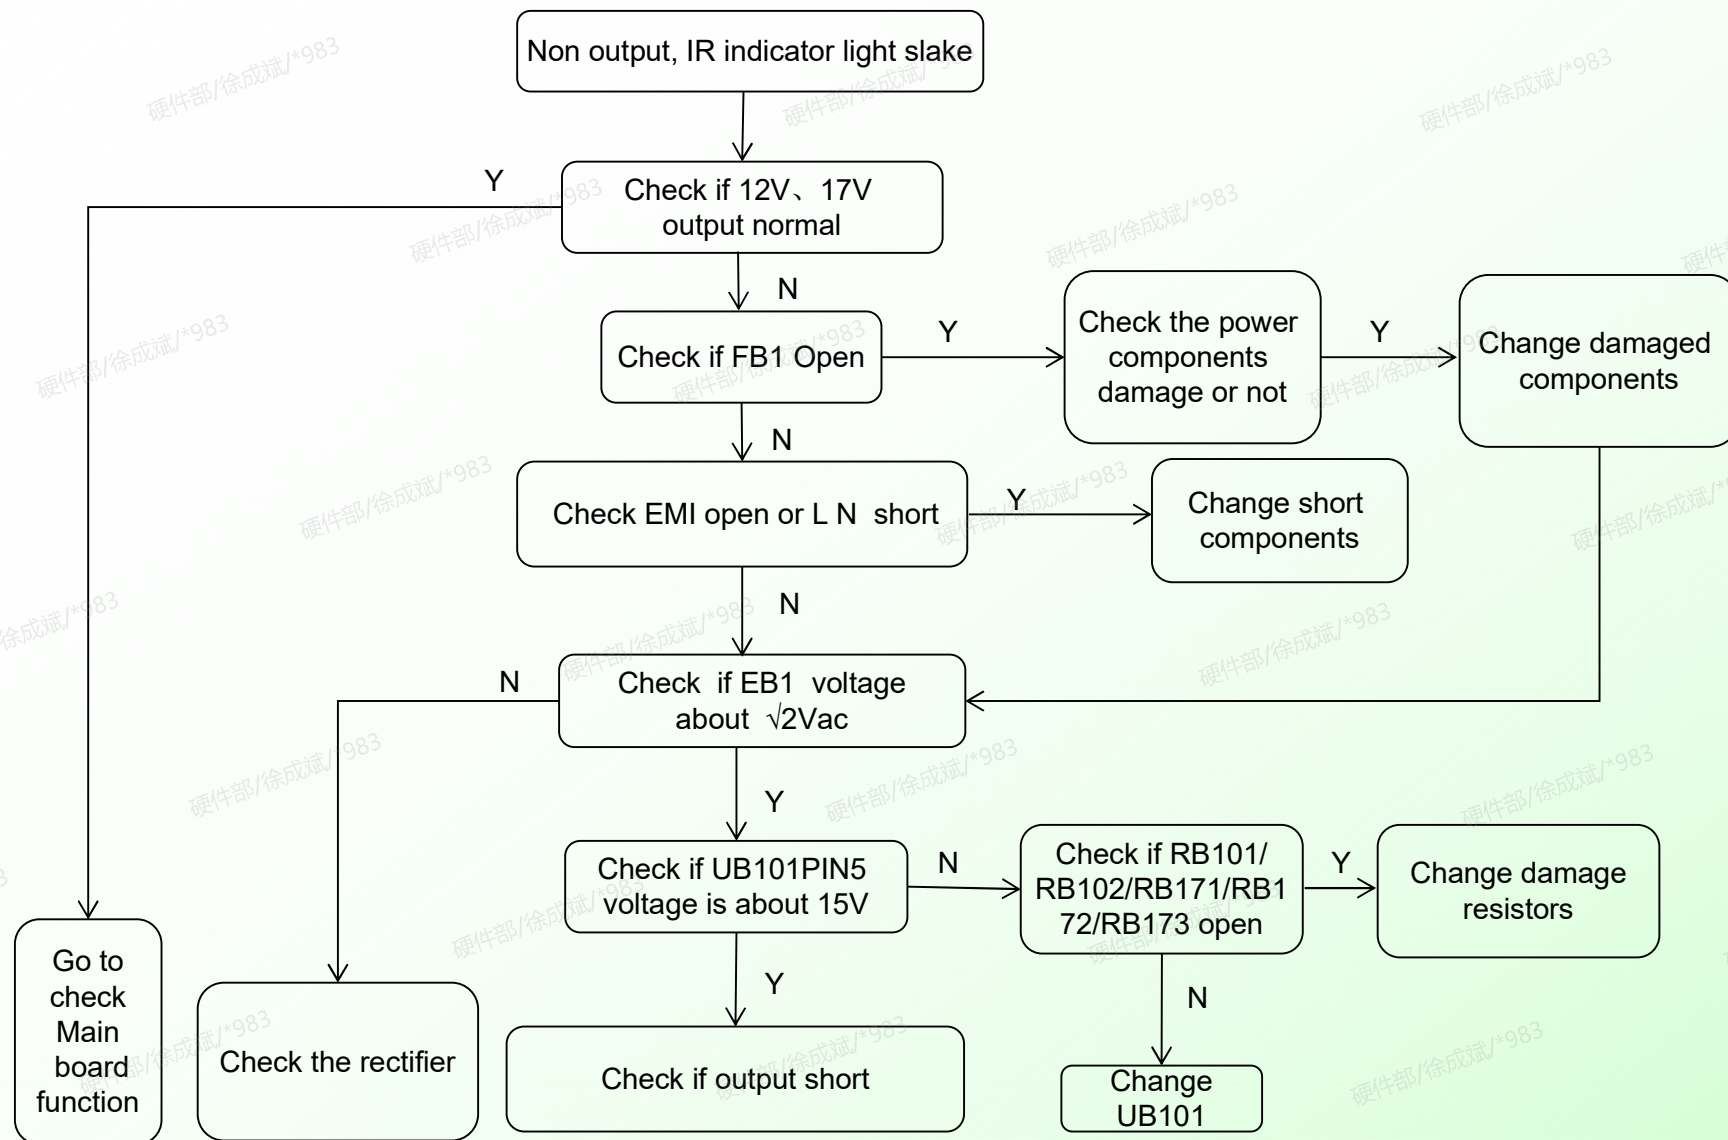


3.Power supply for LED drive

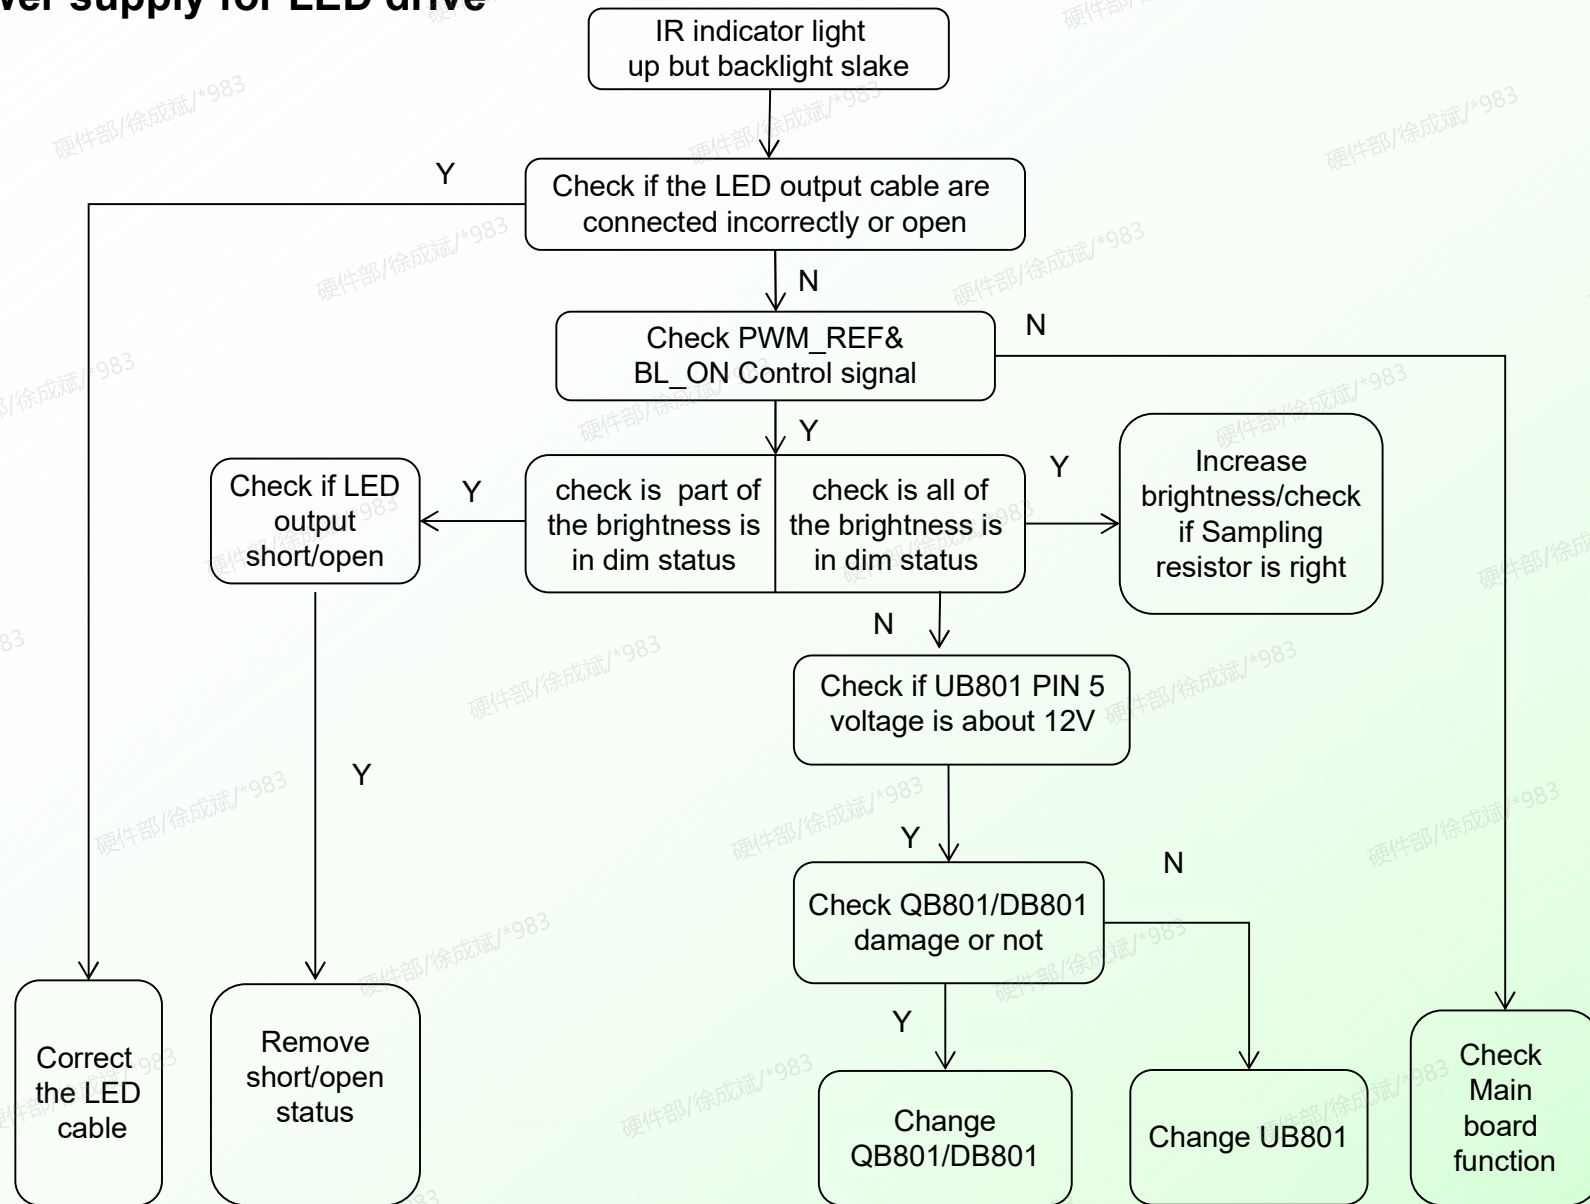


5. Power Troubleshooting

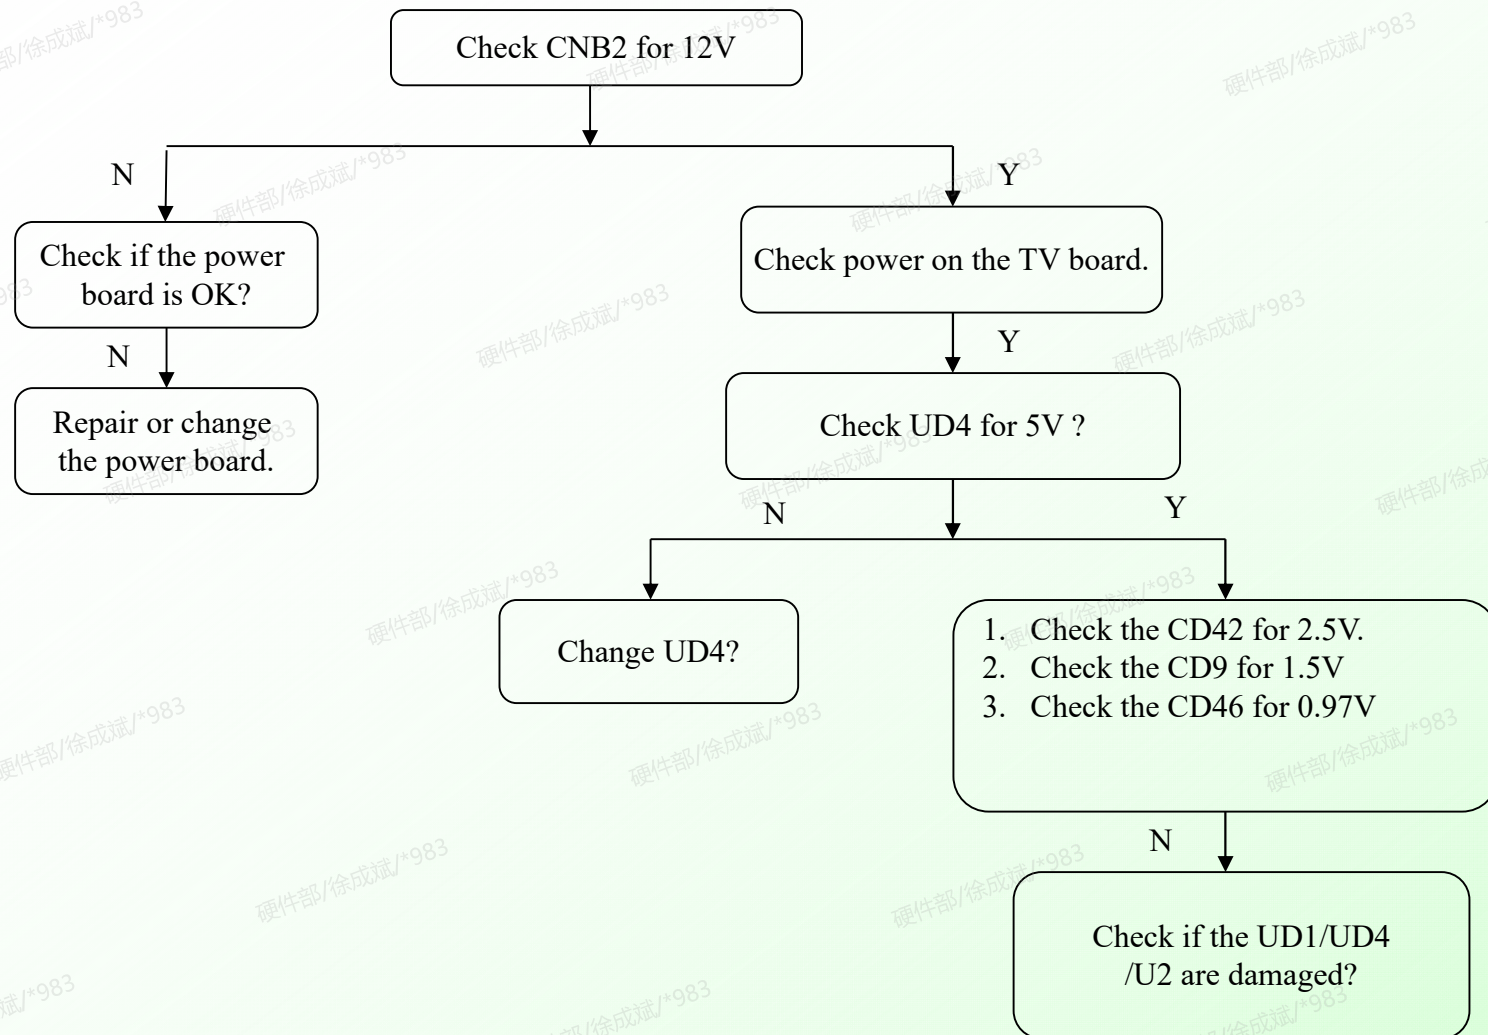


6. Display Troubleshooting (blank screen or show nothing)

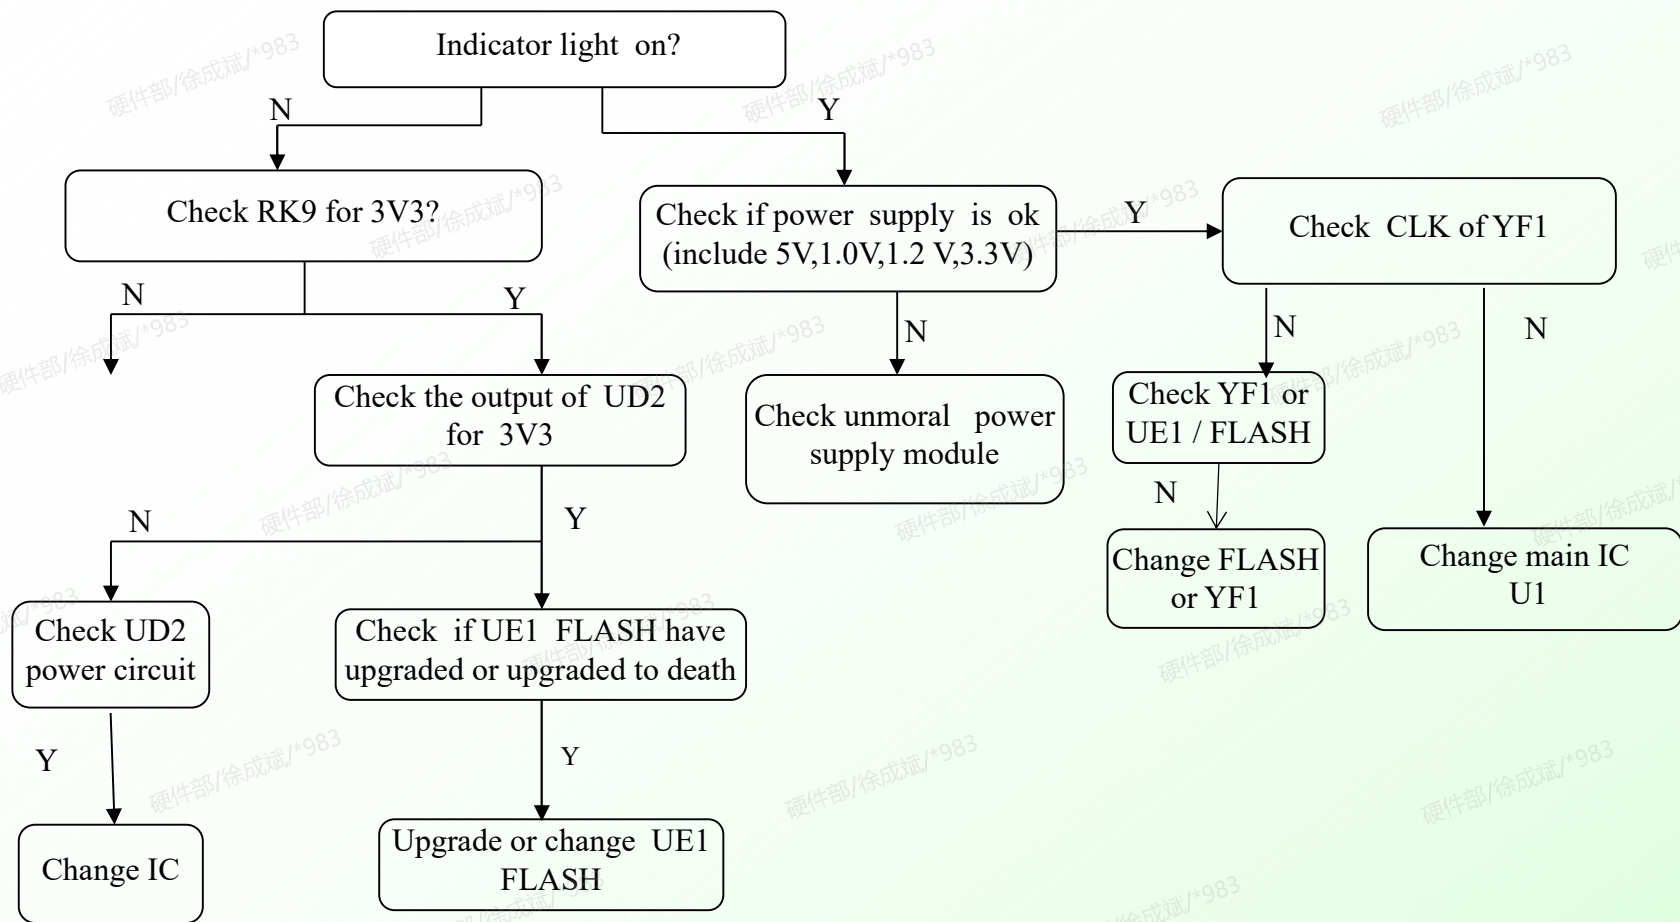


7. Display Troubleshooting (white screen)

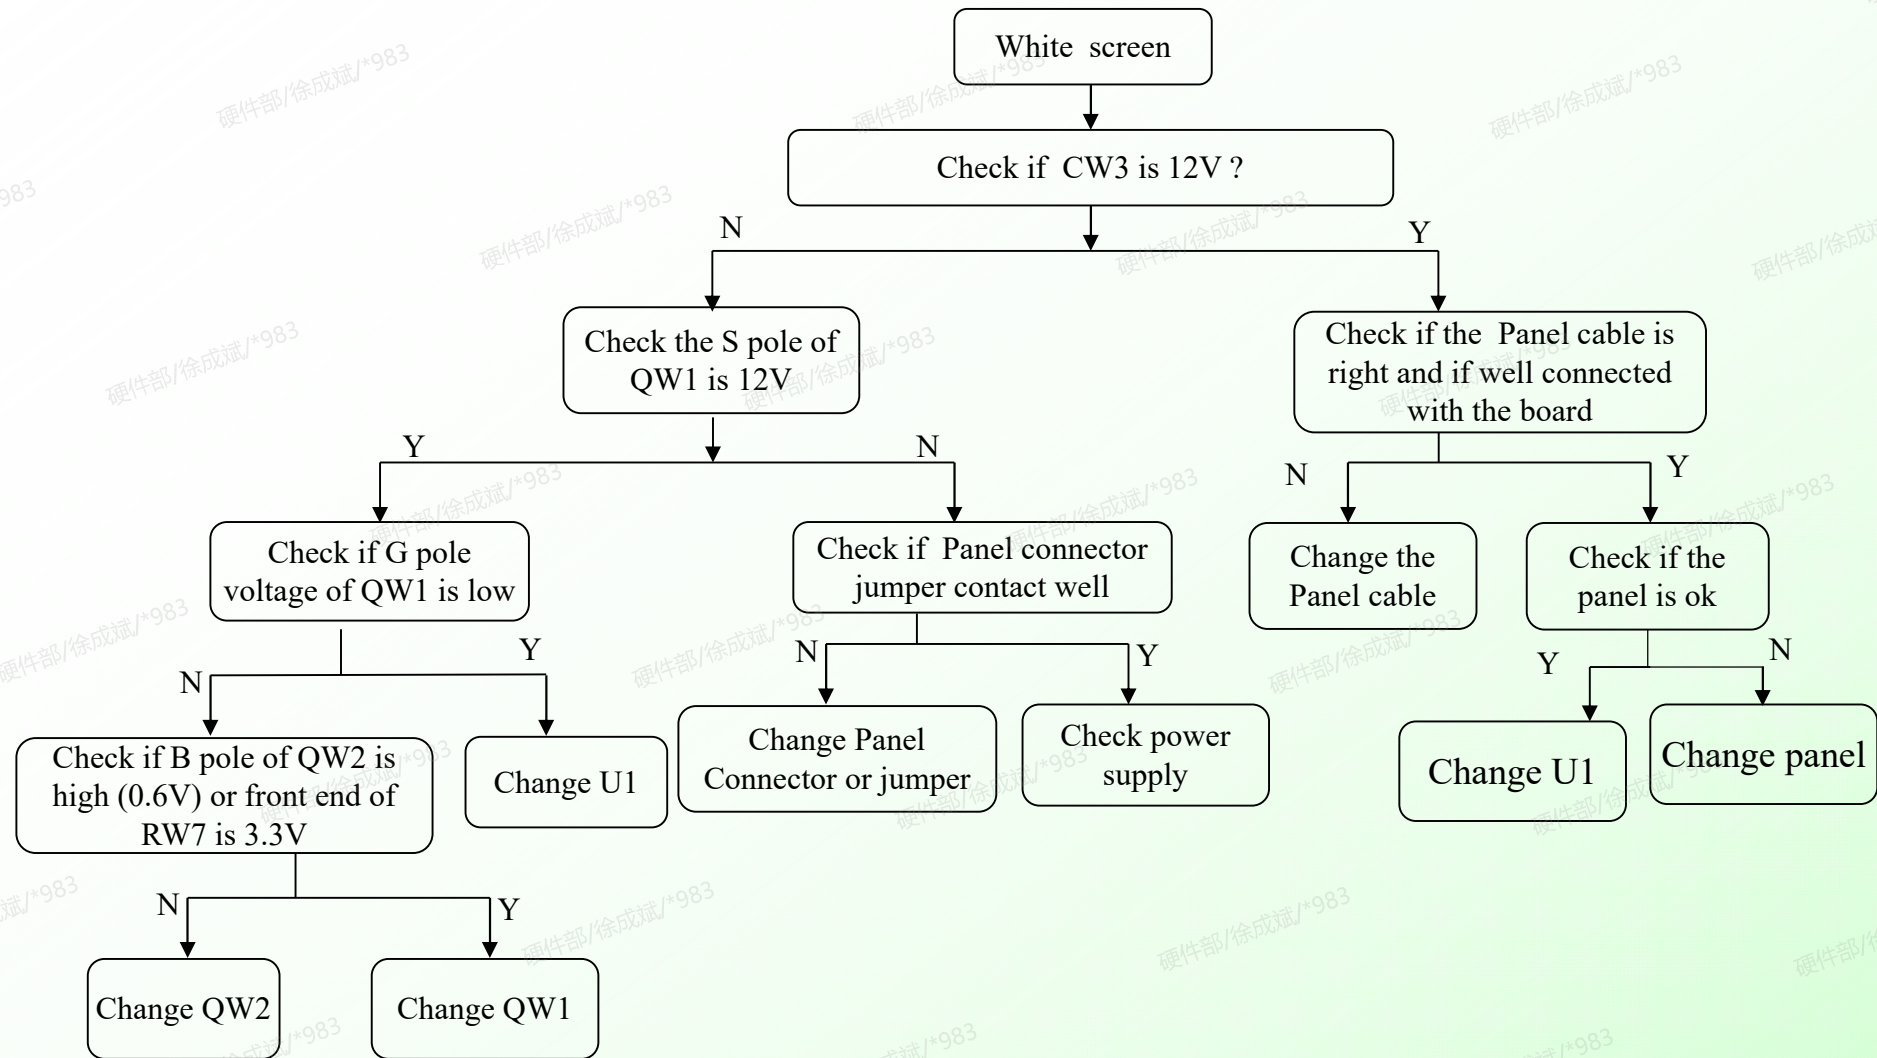


8. Display Troubleshooting (picture badness)

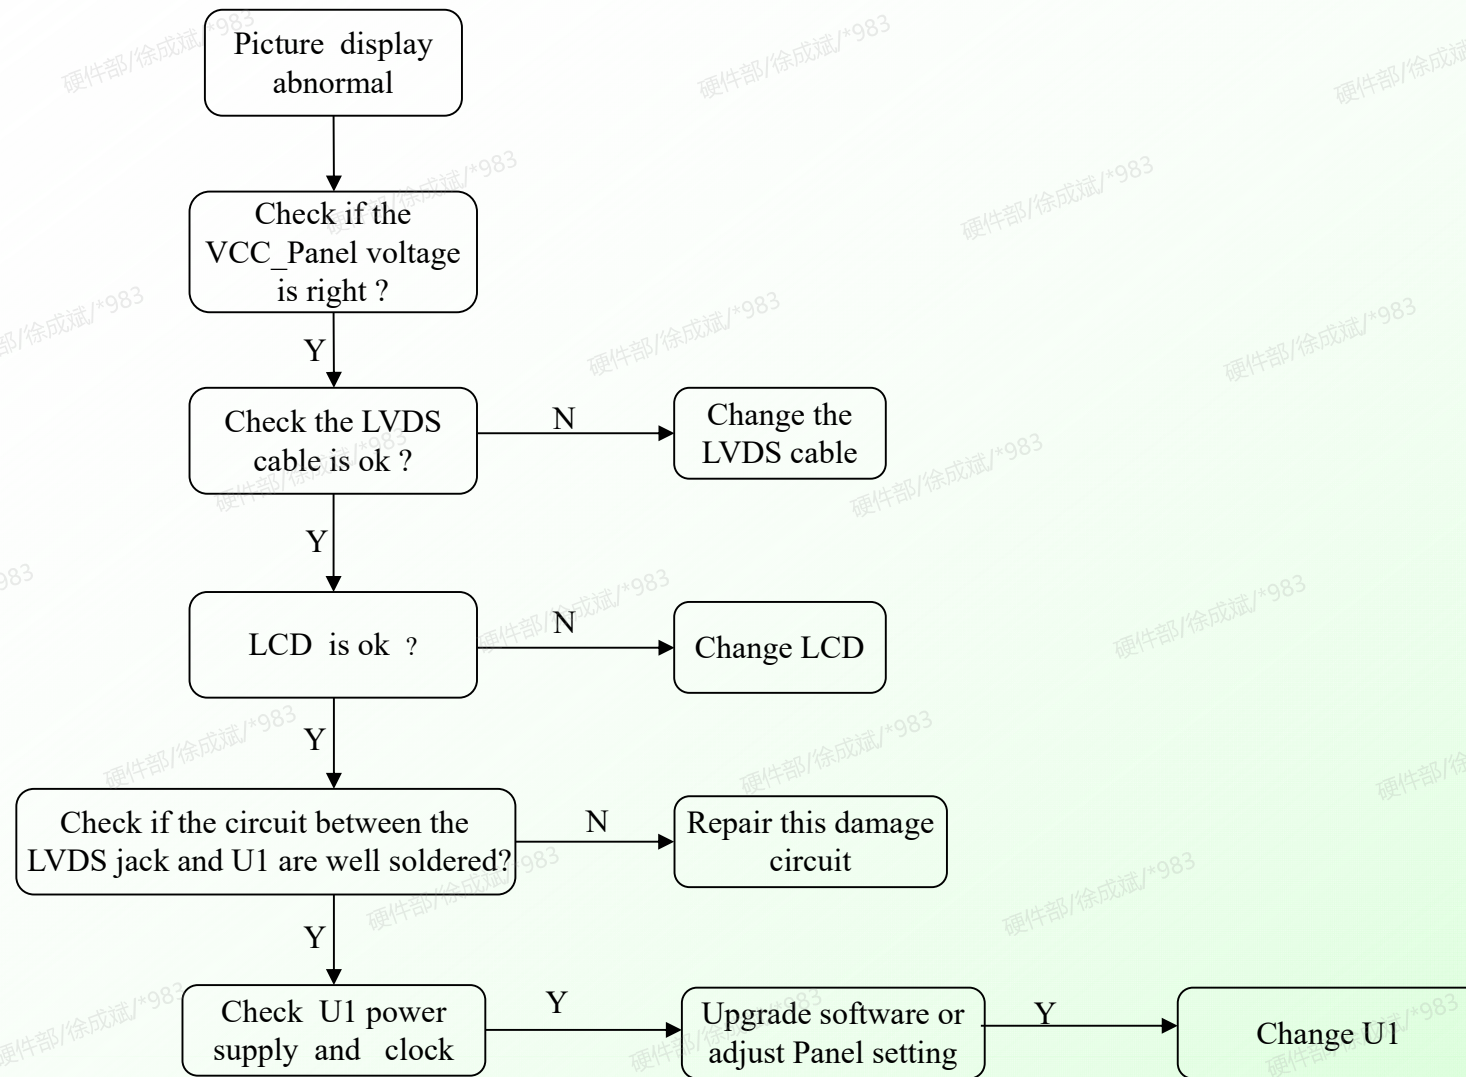


9. Audio Troubleshooting (no sound)

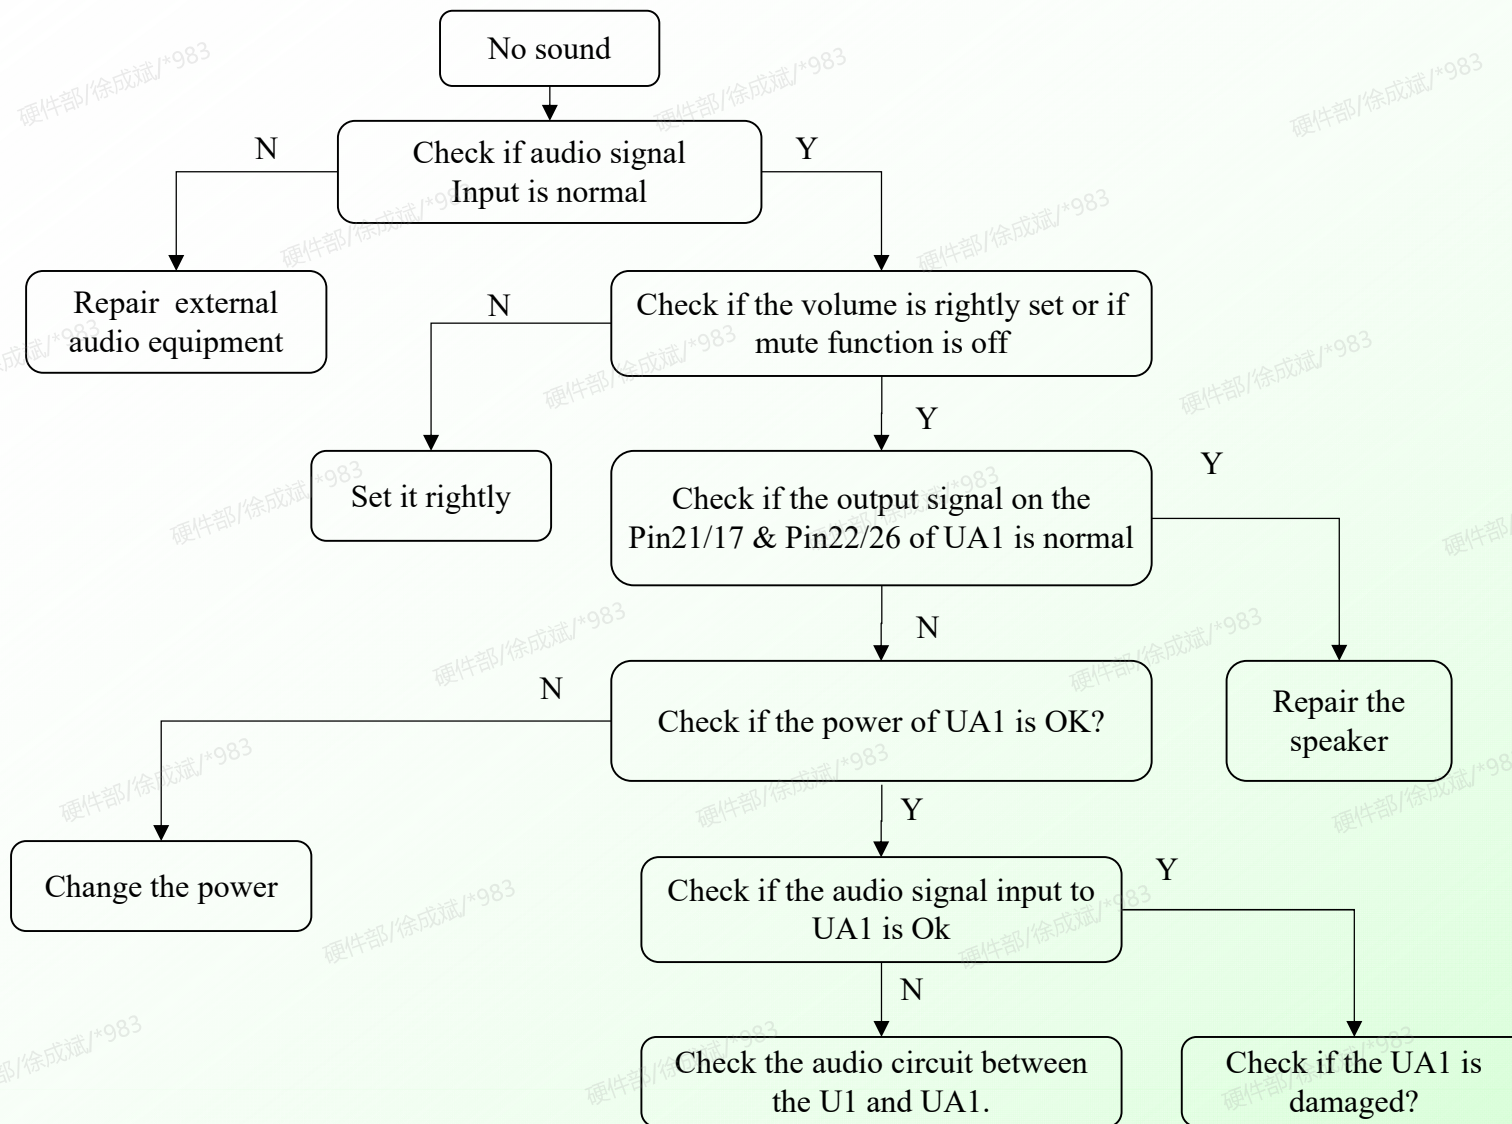


10. Function Troubleshooting (TV fault)

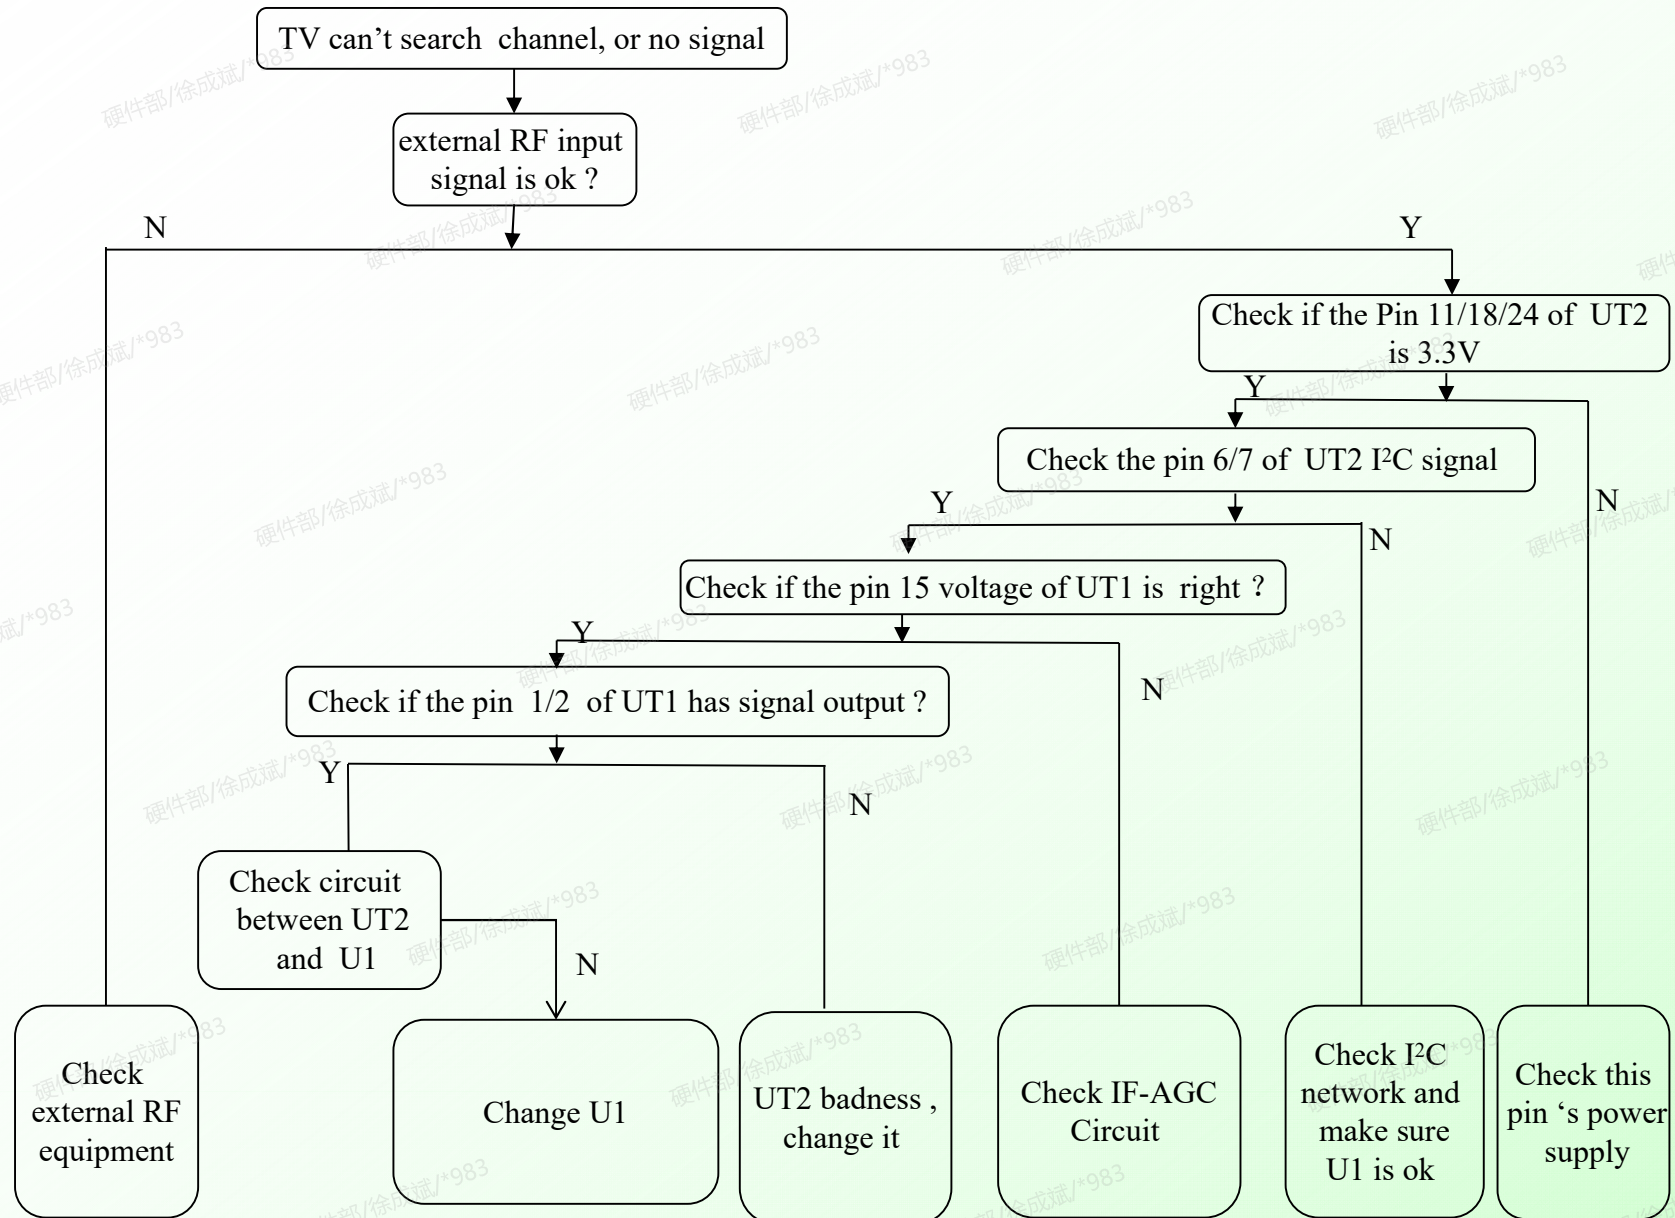


11. Function Troubleshooting (HDMI no sound)

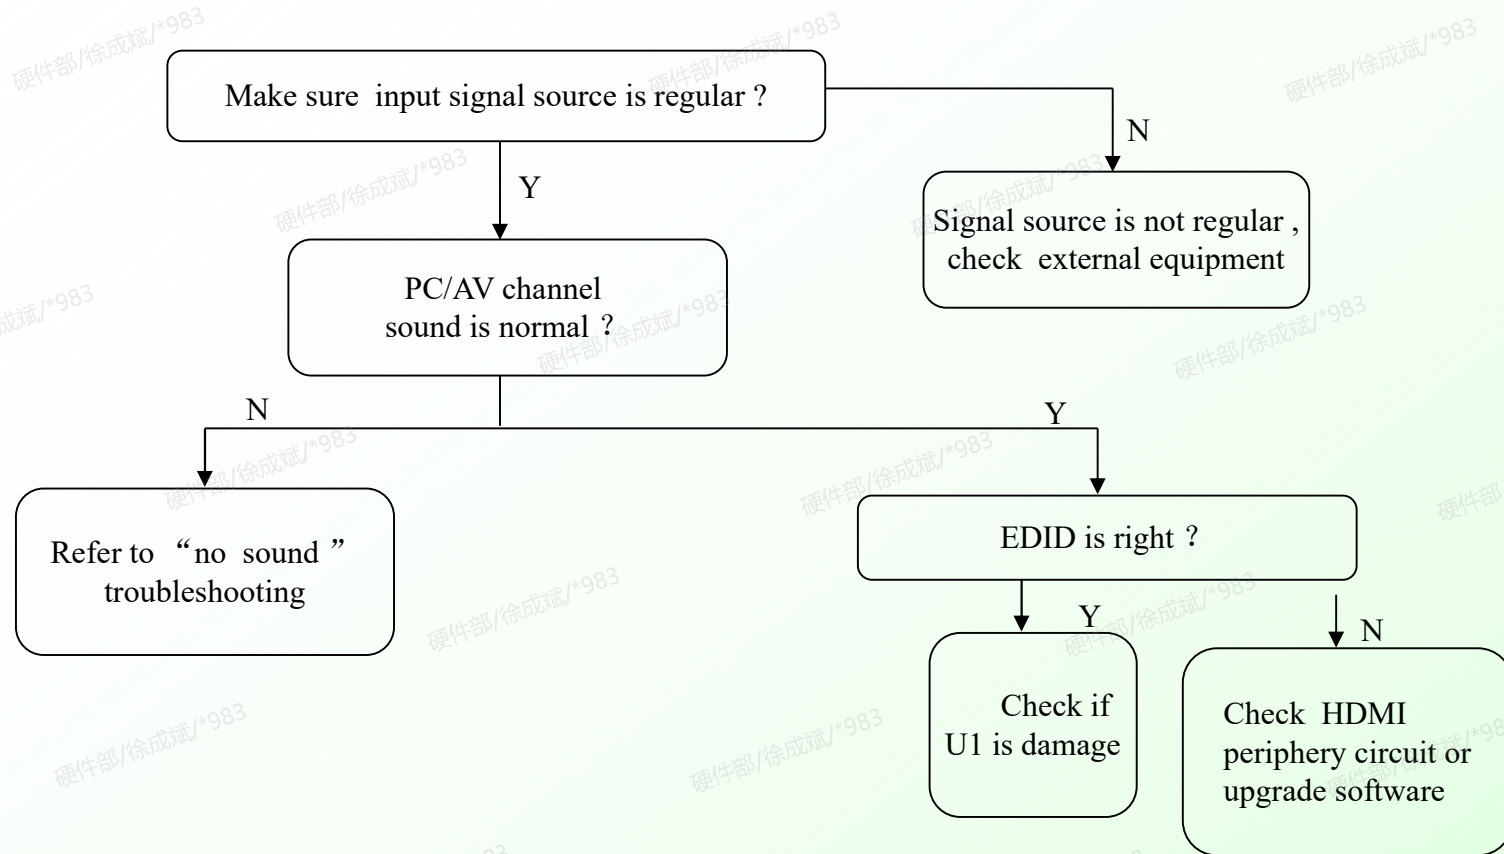

12. Function Troubleshooting (HDMI no picture)

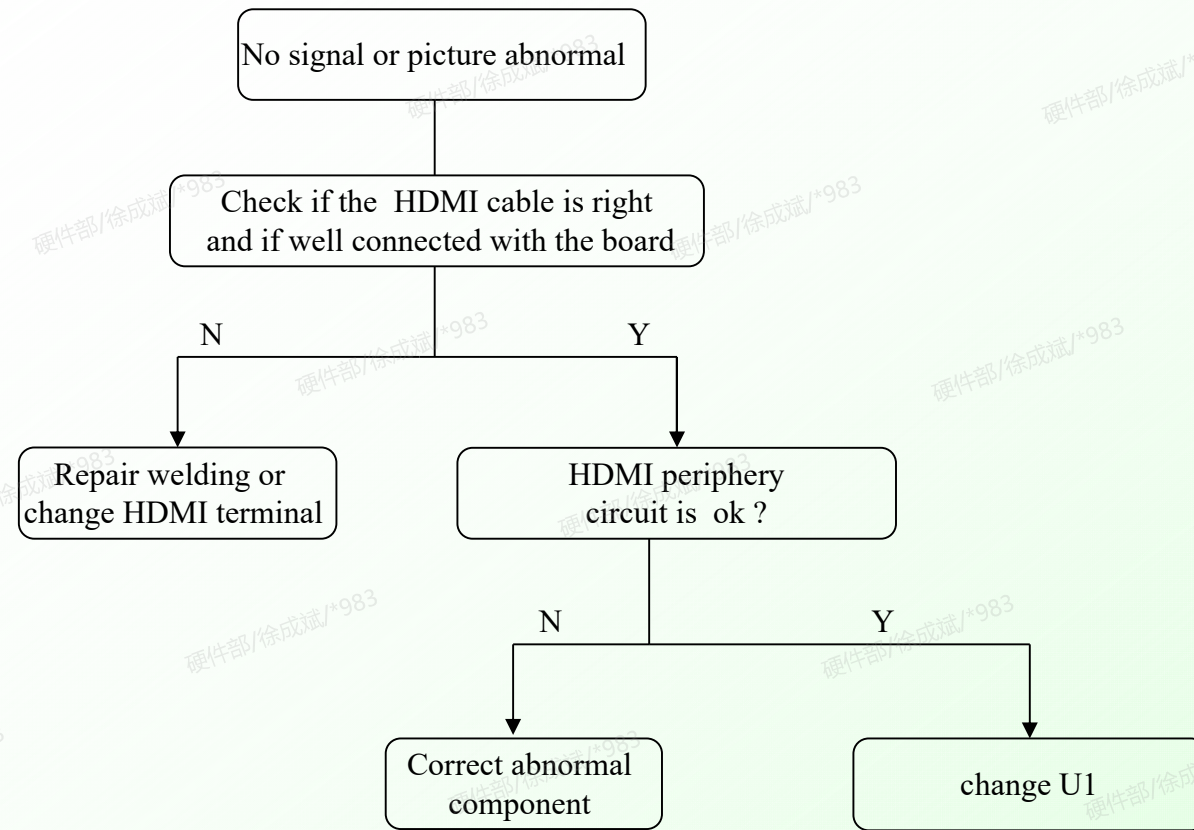

13. Function Troubleshooting (CVBS no signal)

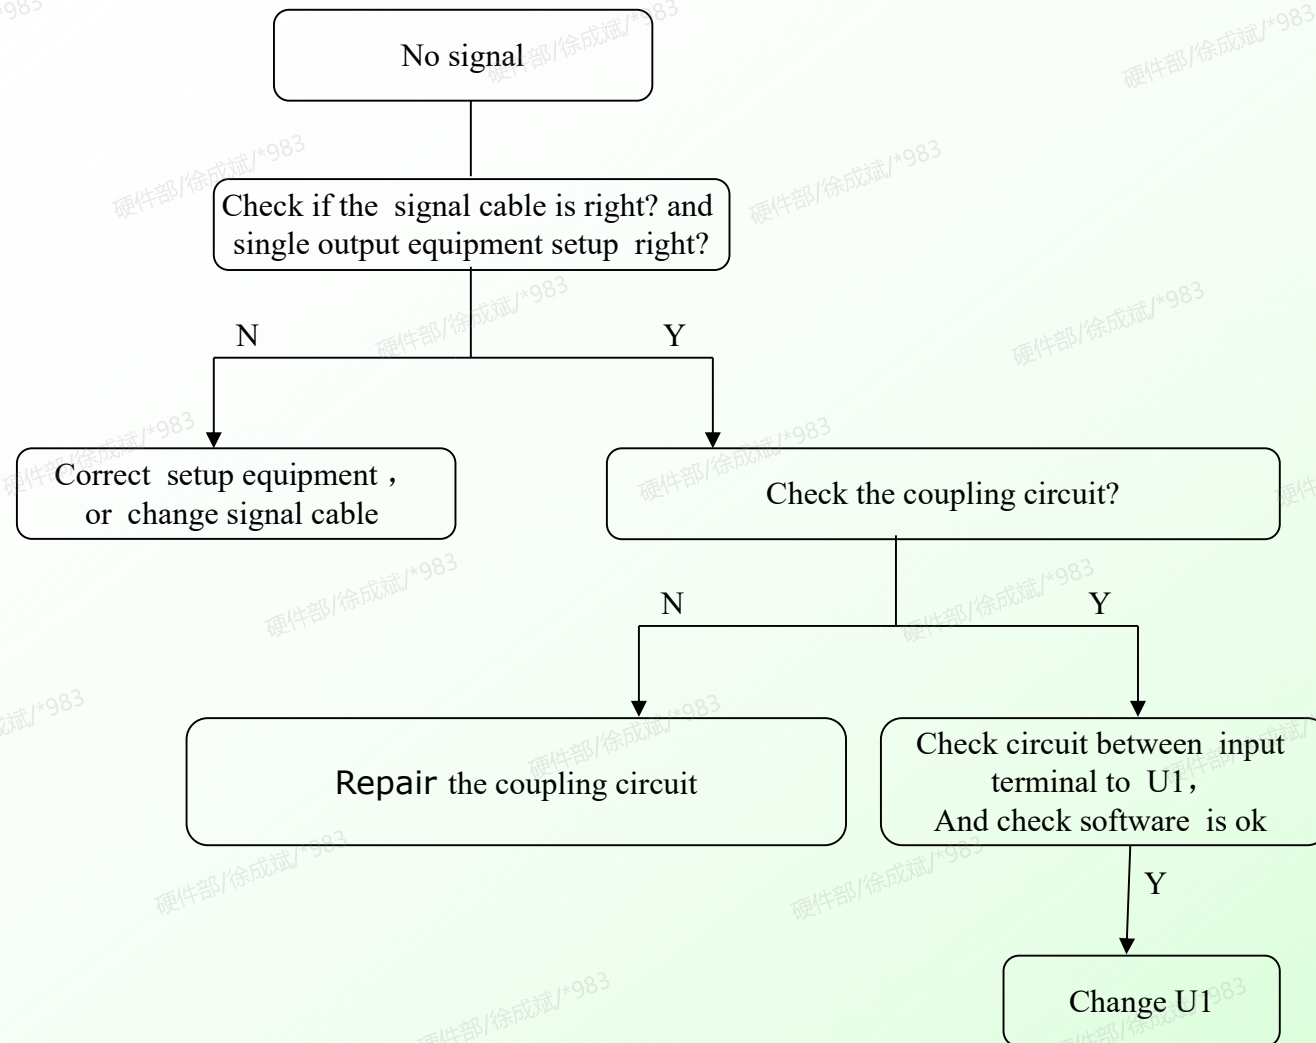

14. Function Troubleshooting (other)

USB is abnormal



Repair the USB power