

TPD.NT72690T.PB758


Trouble Shooting

- Power supply**
- Display**
- Audio**
- Function**


TV Author : Wang Jiahao
POWER Author : Wang Hongbo

Checked By : Long Shudong
Checked By : Cai Jiatian


1. Power circuit diagram

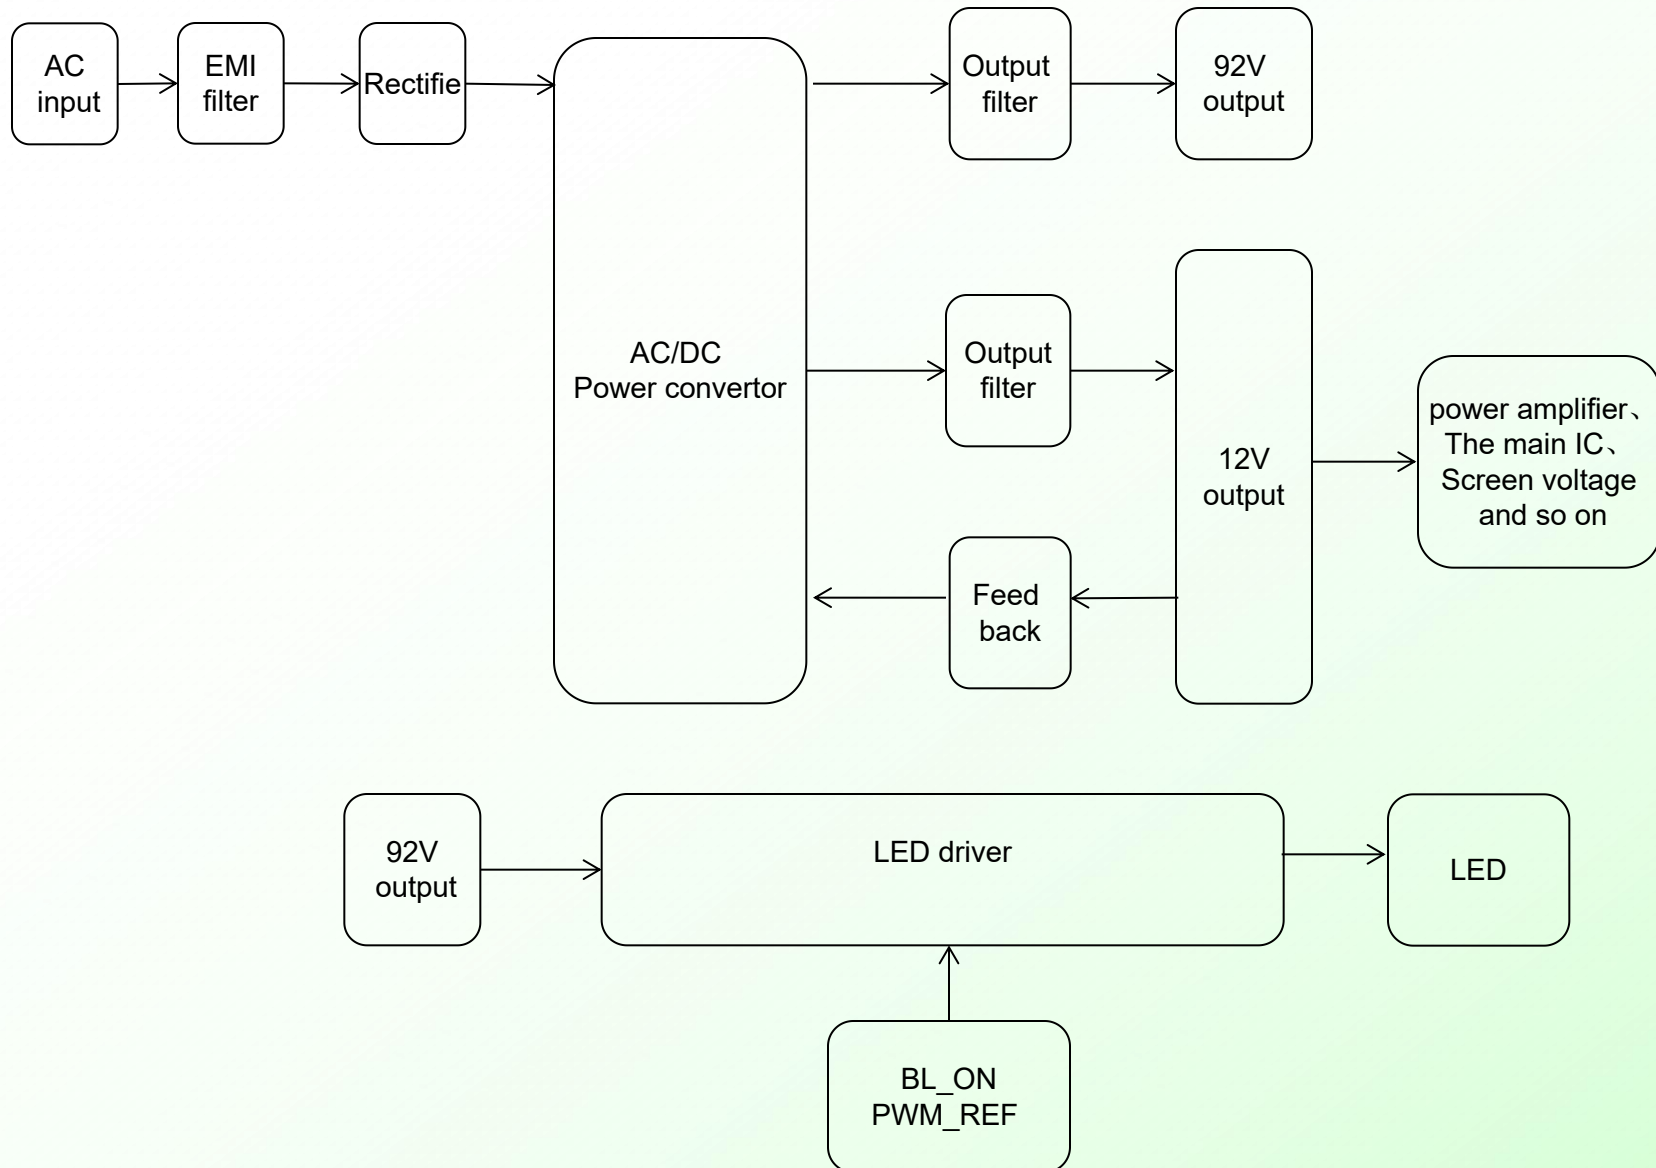


2. Power Supply Trouble 1

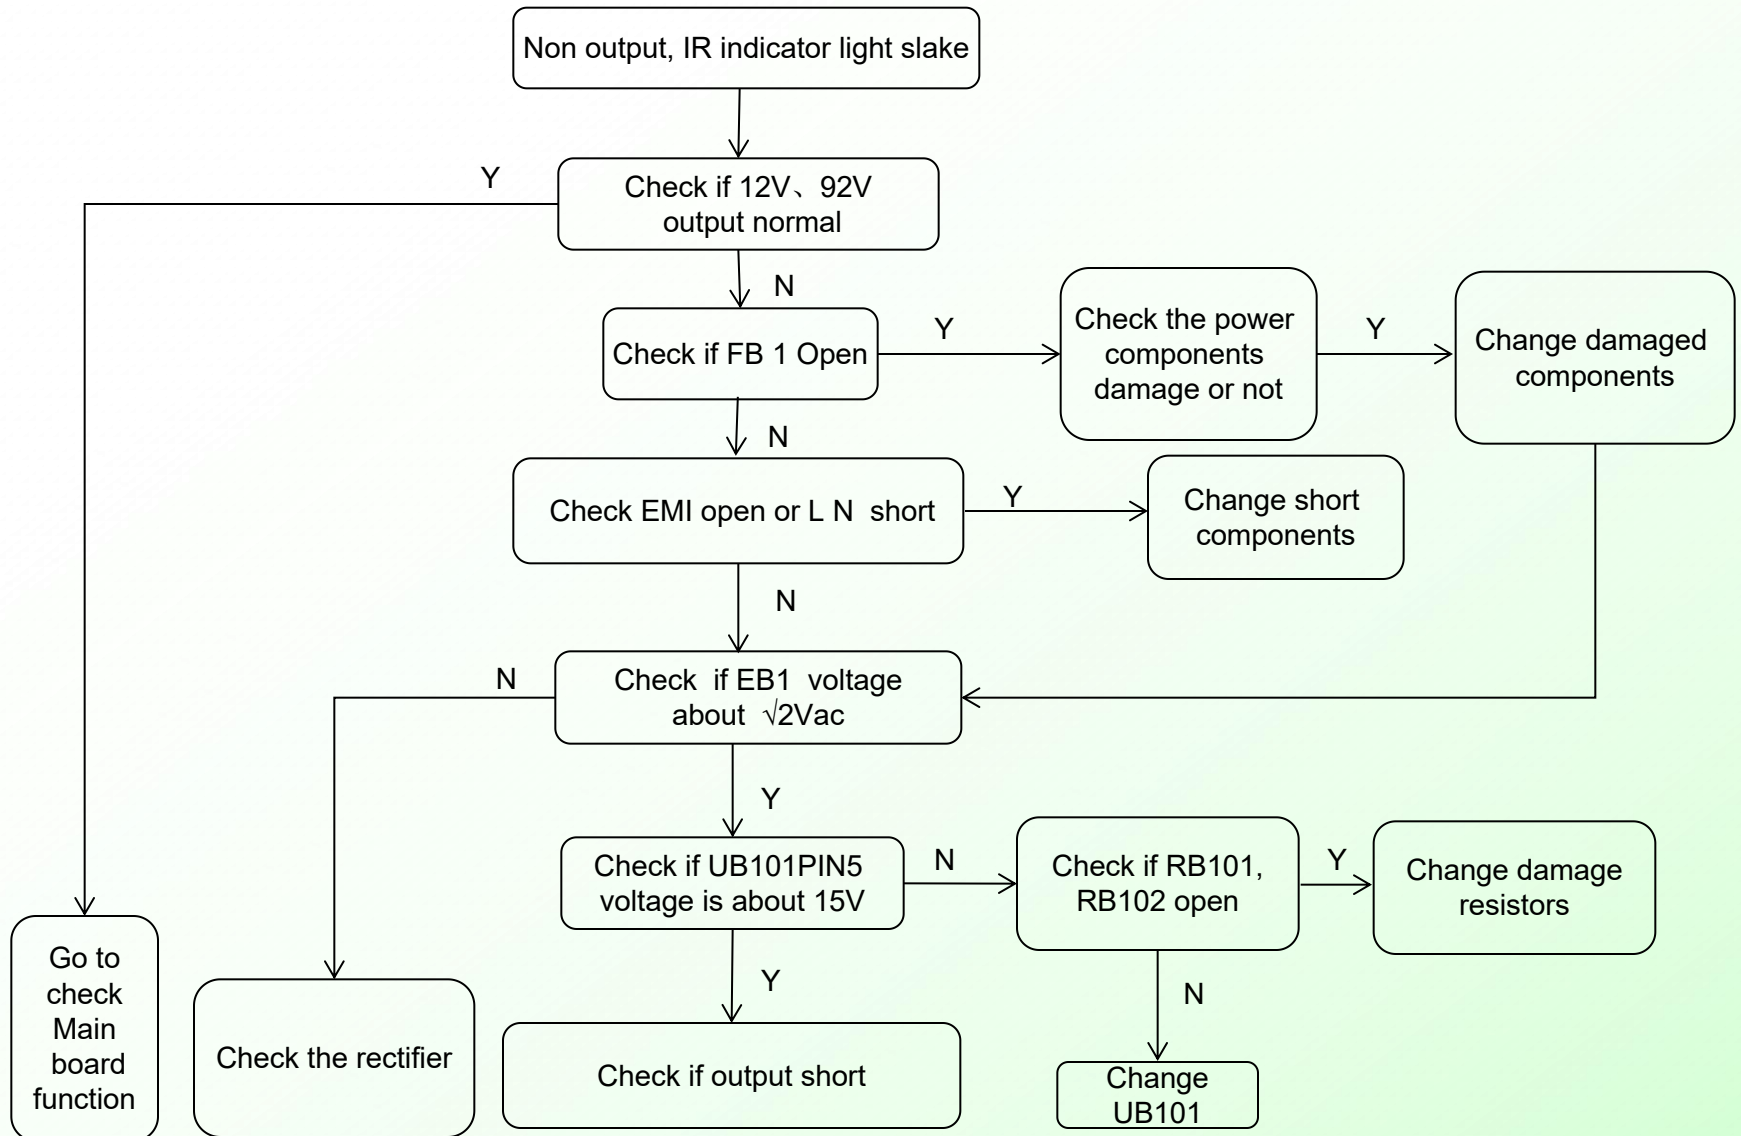


3. Power supply for LED drive

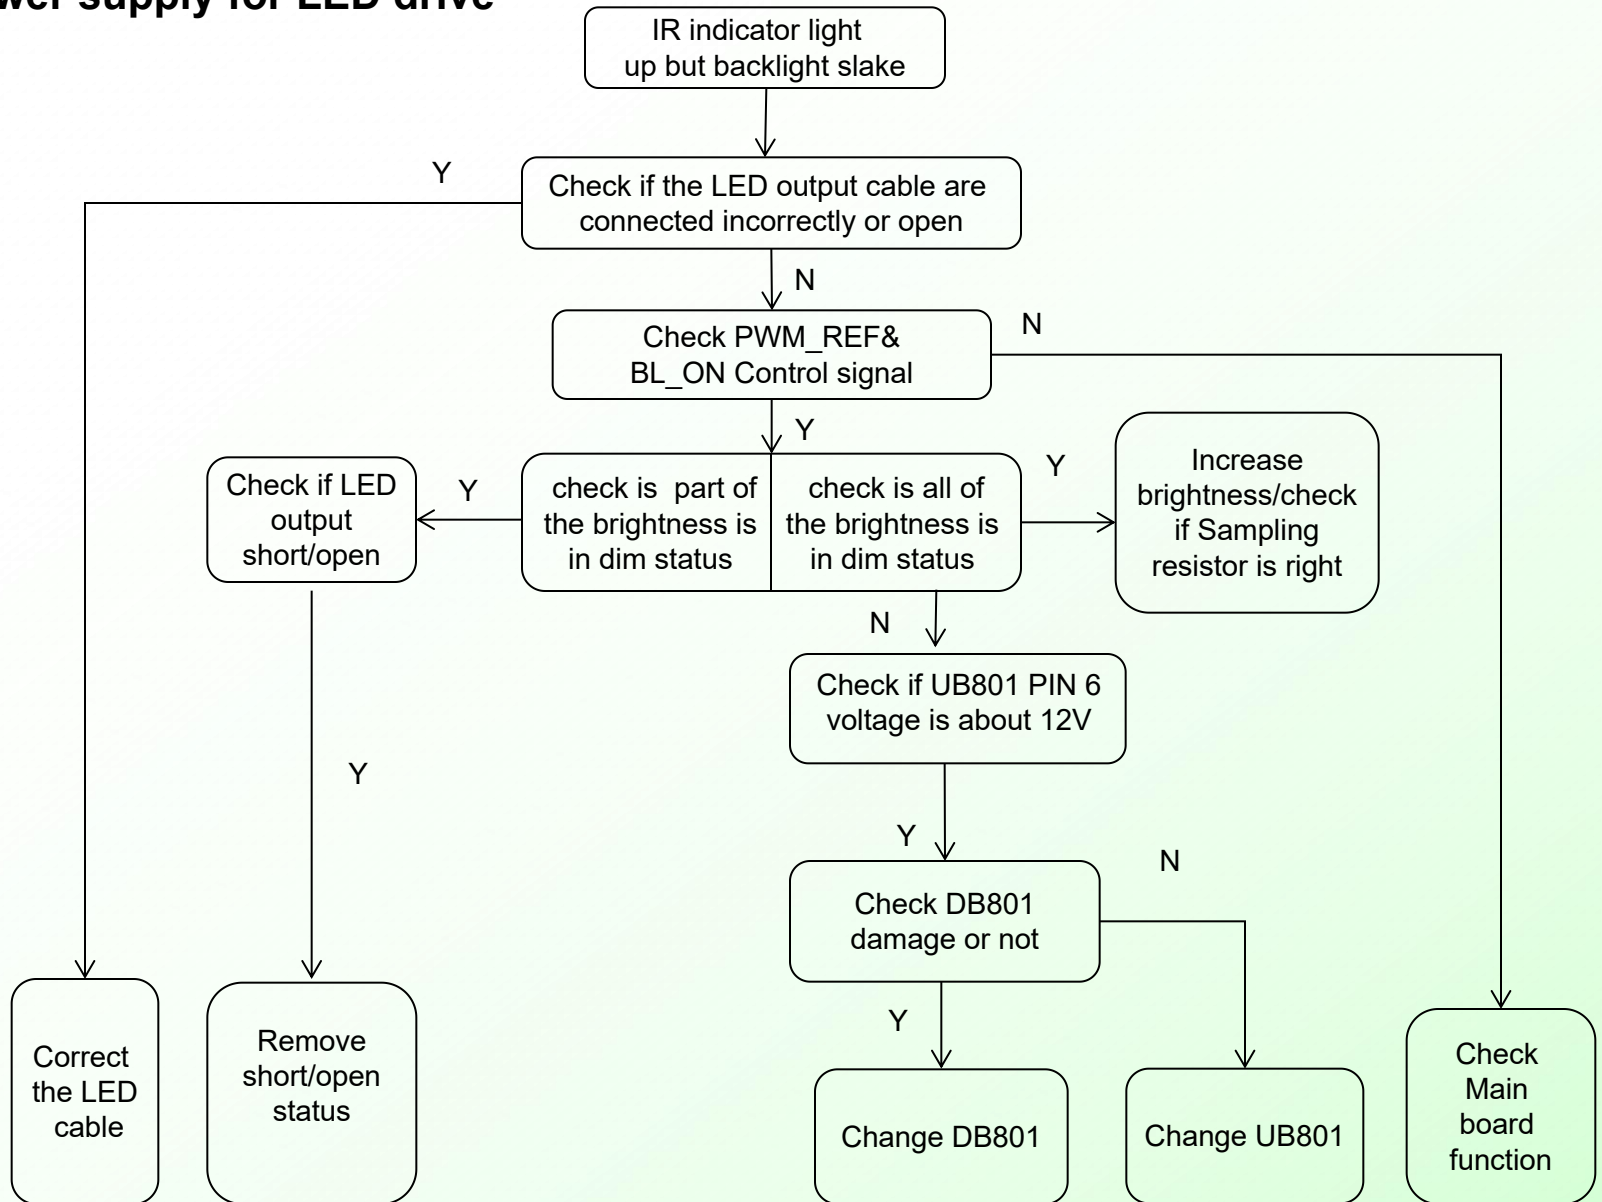


4. Display Troubleshooting (blank screen or show nothing)

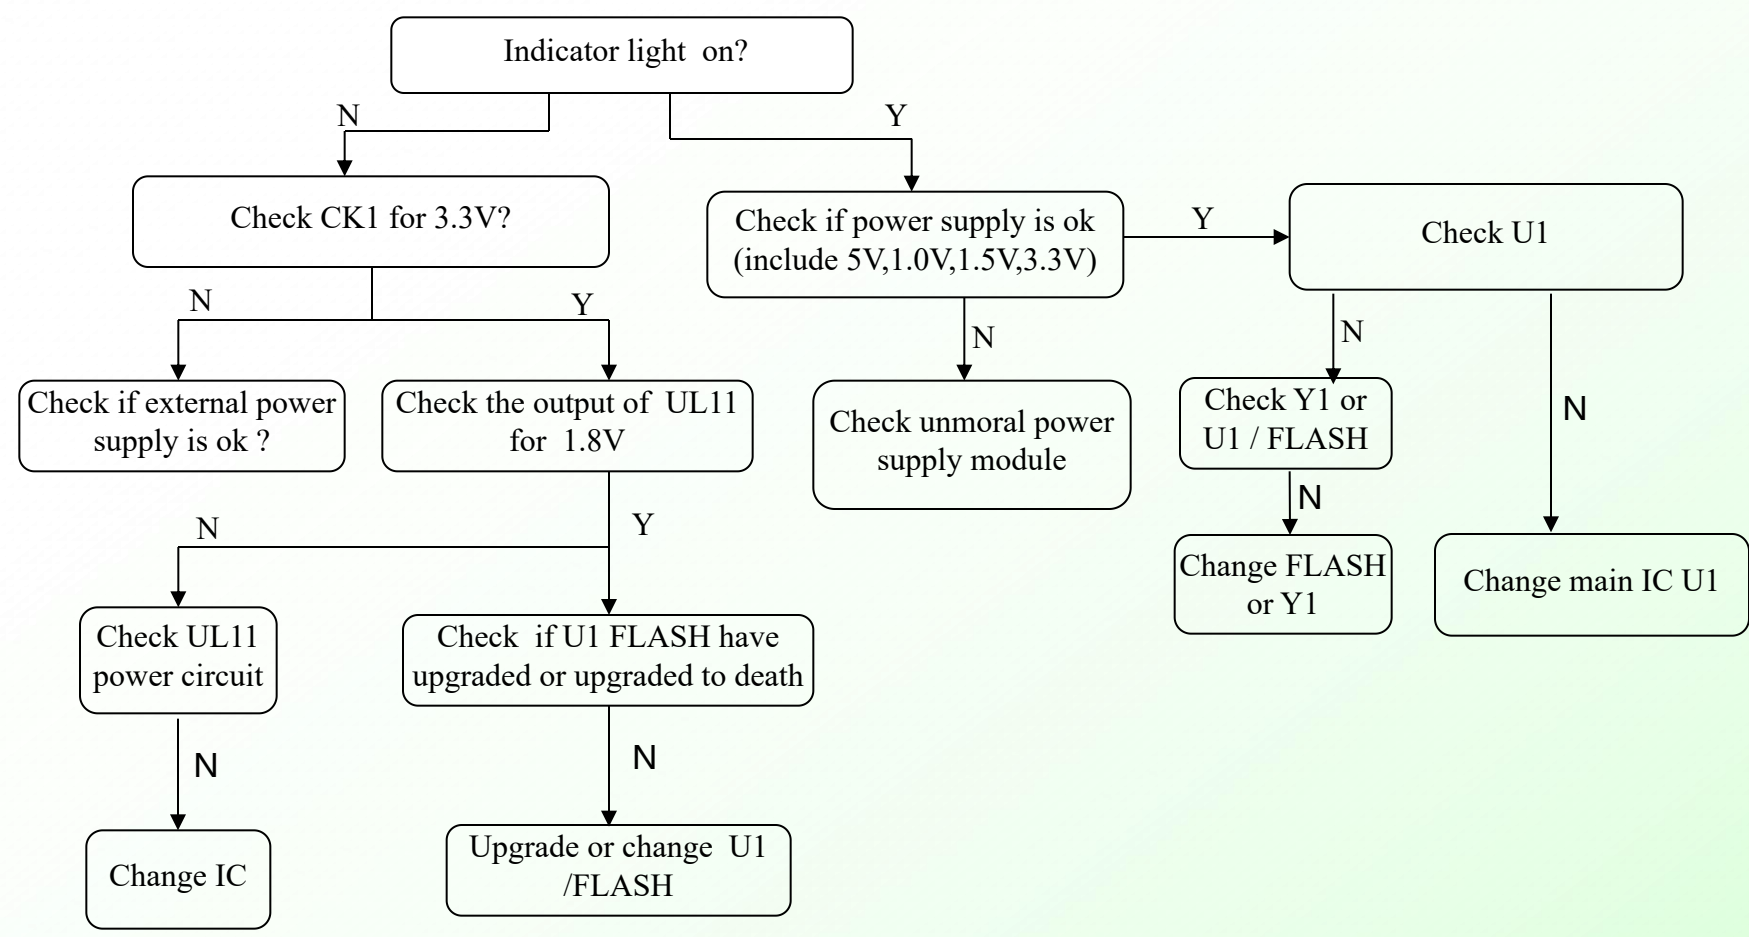


5. Display Troubleshooting (white screen)

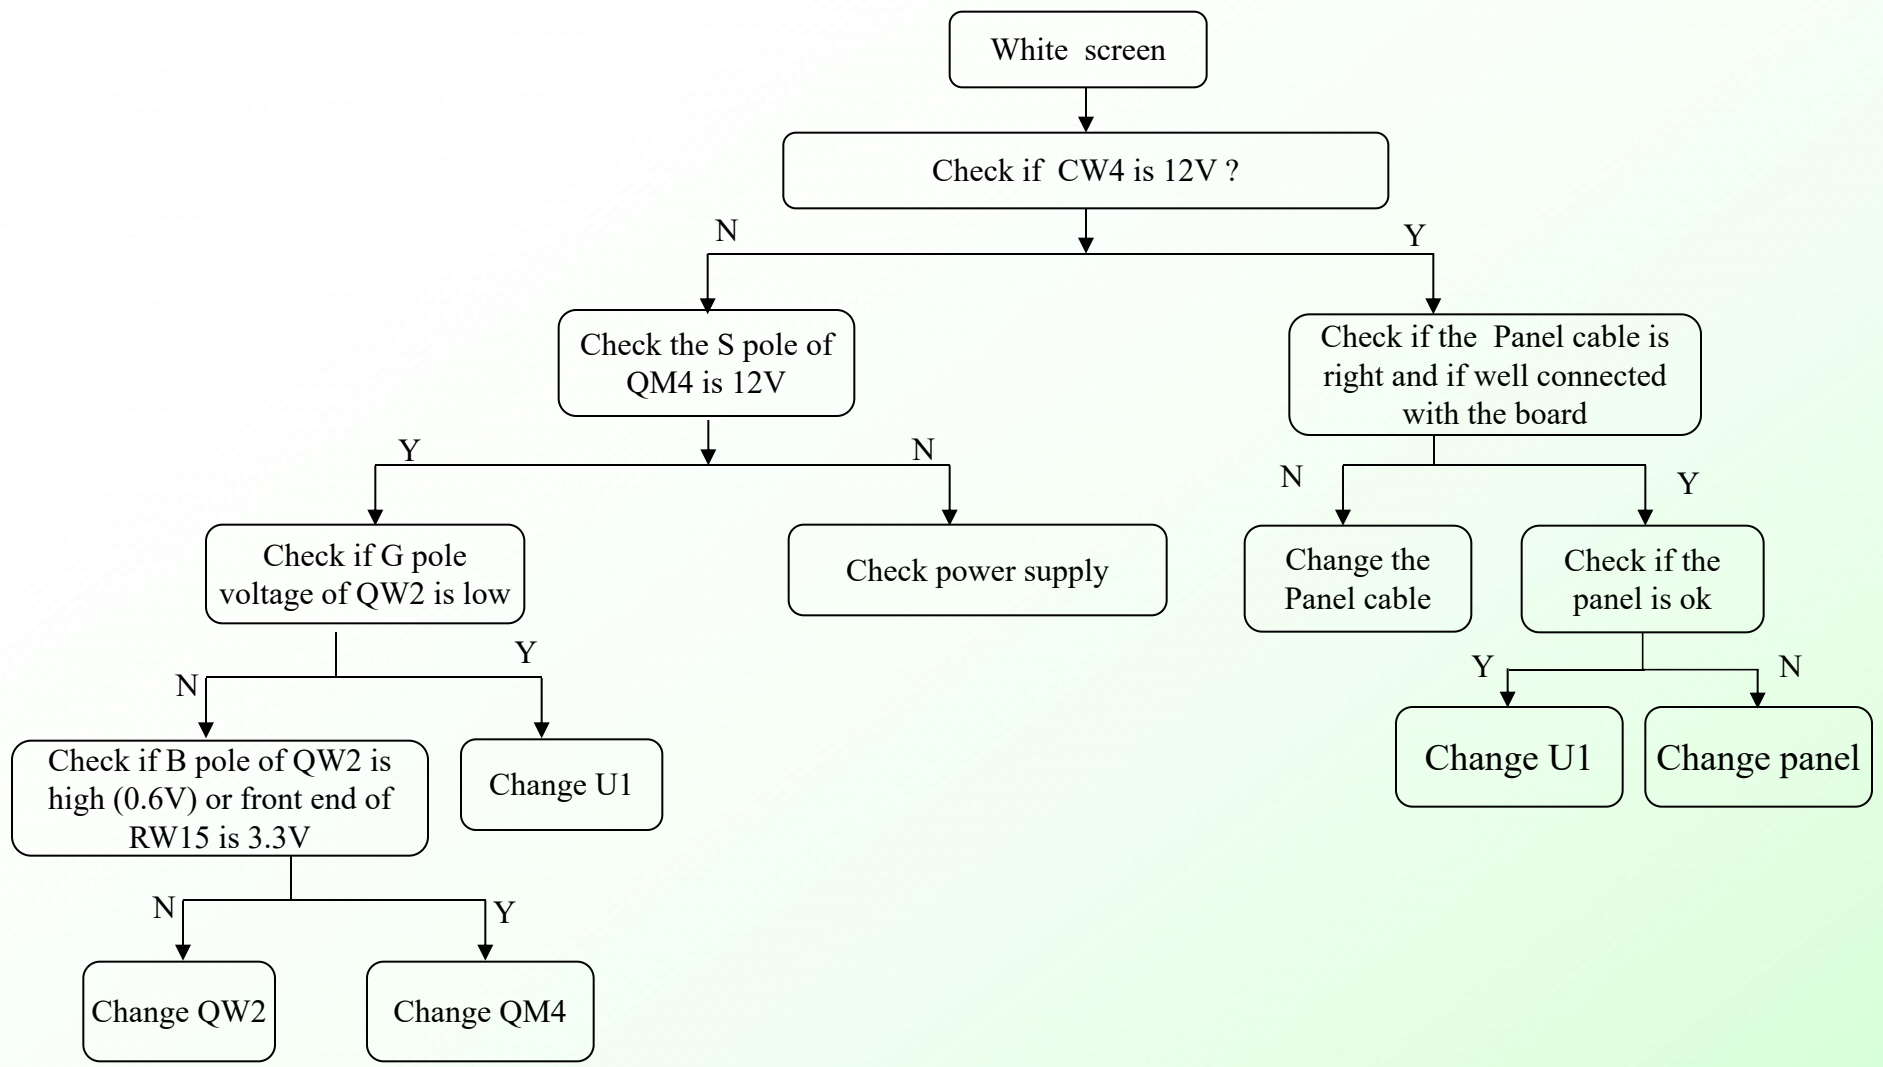


6. Display Troubleshooting (picture badness)

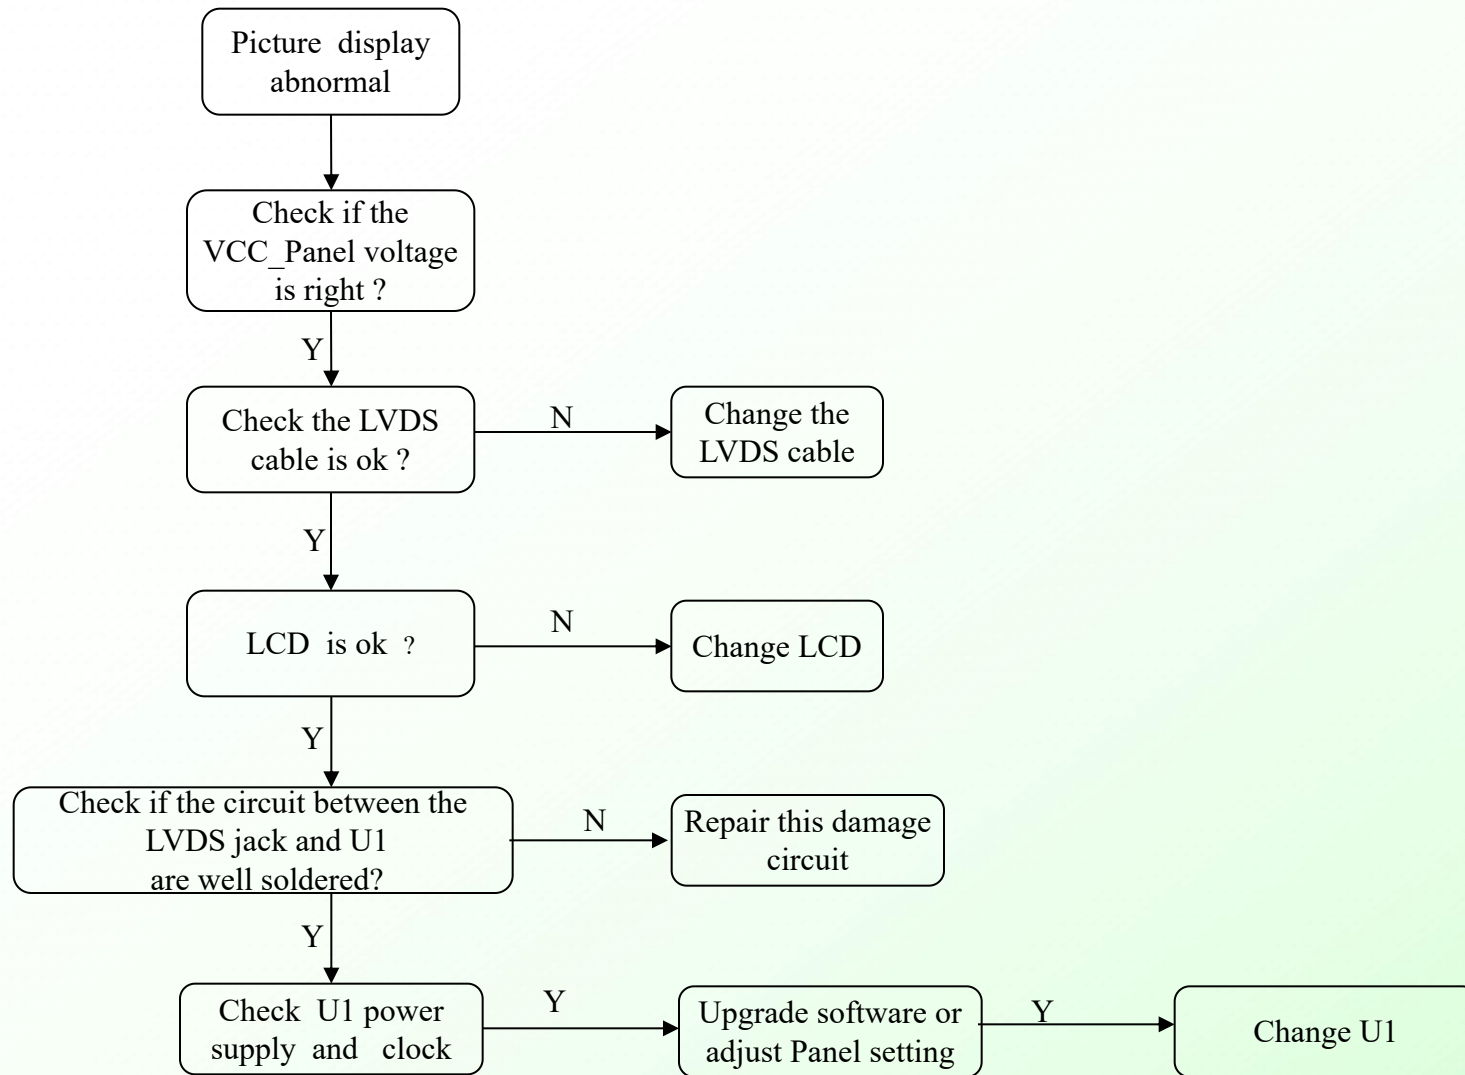


7. Audio Troubleshooting (no sound)

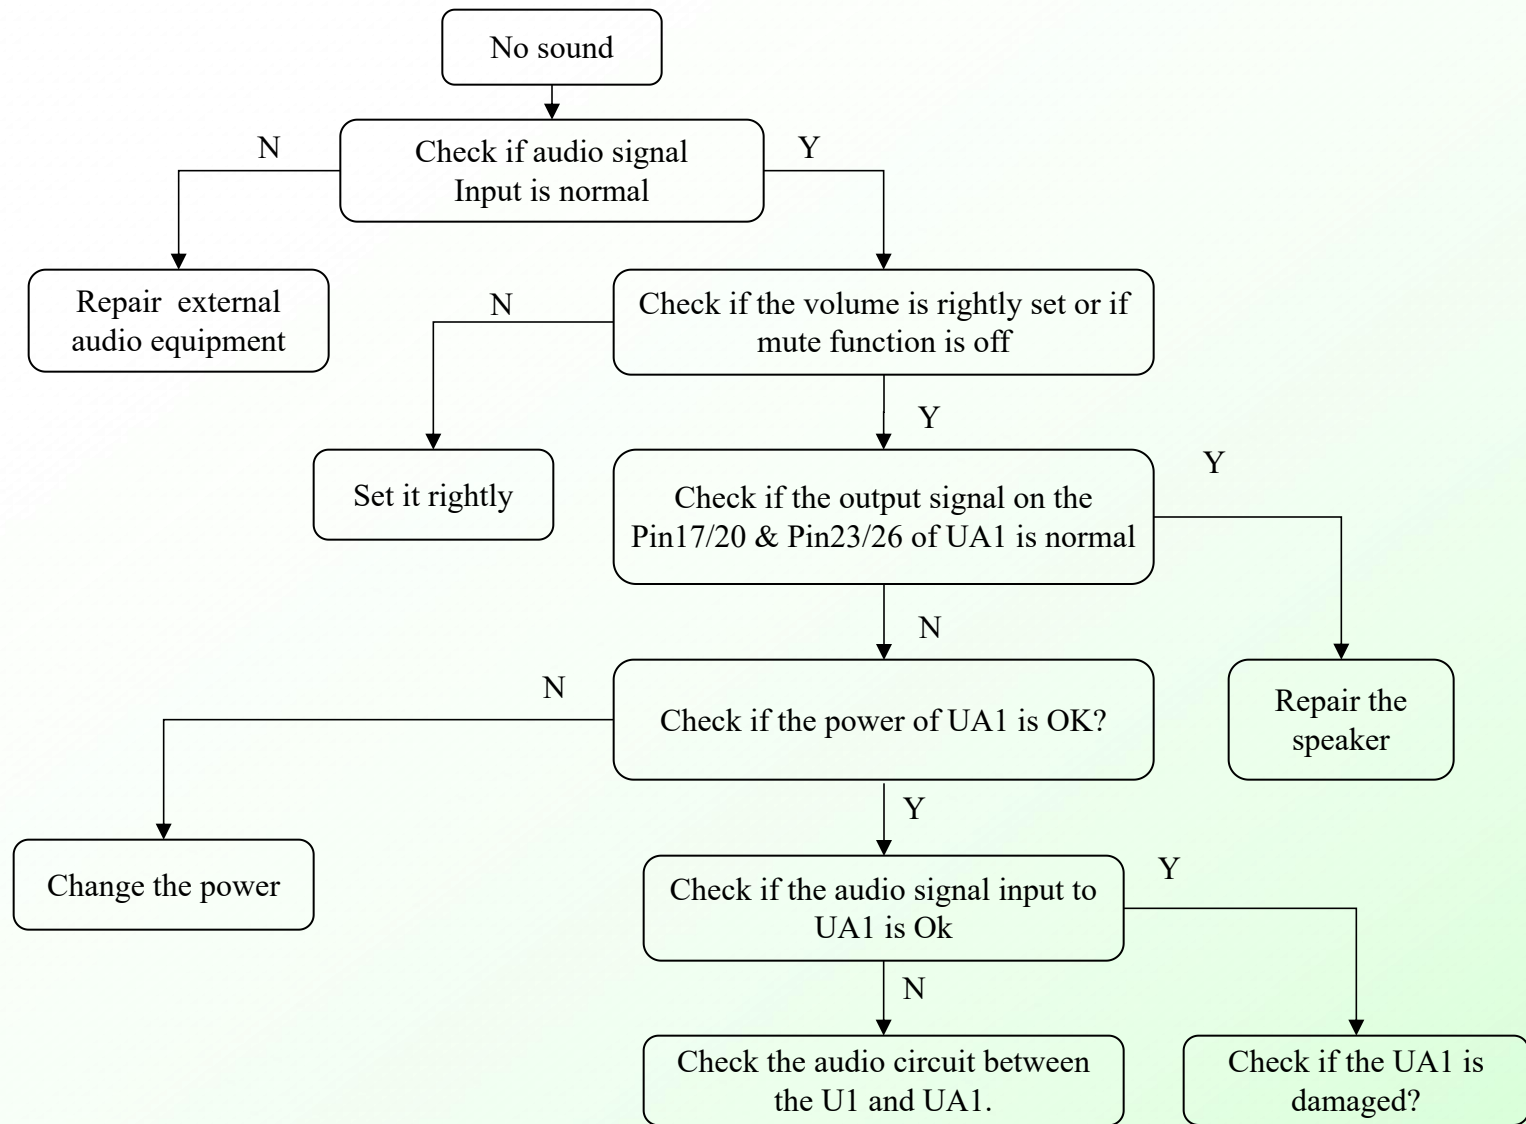


8. Function Troubleshooting (TV fault)

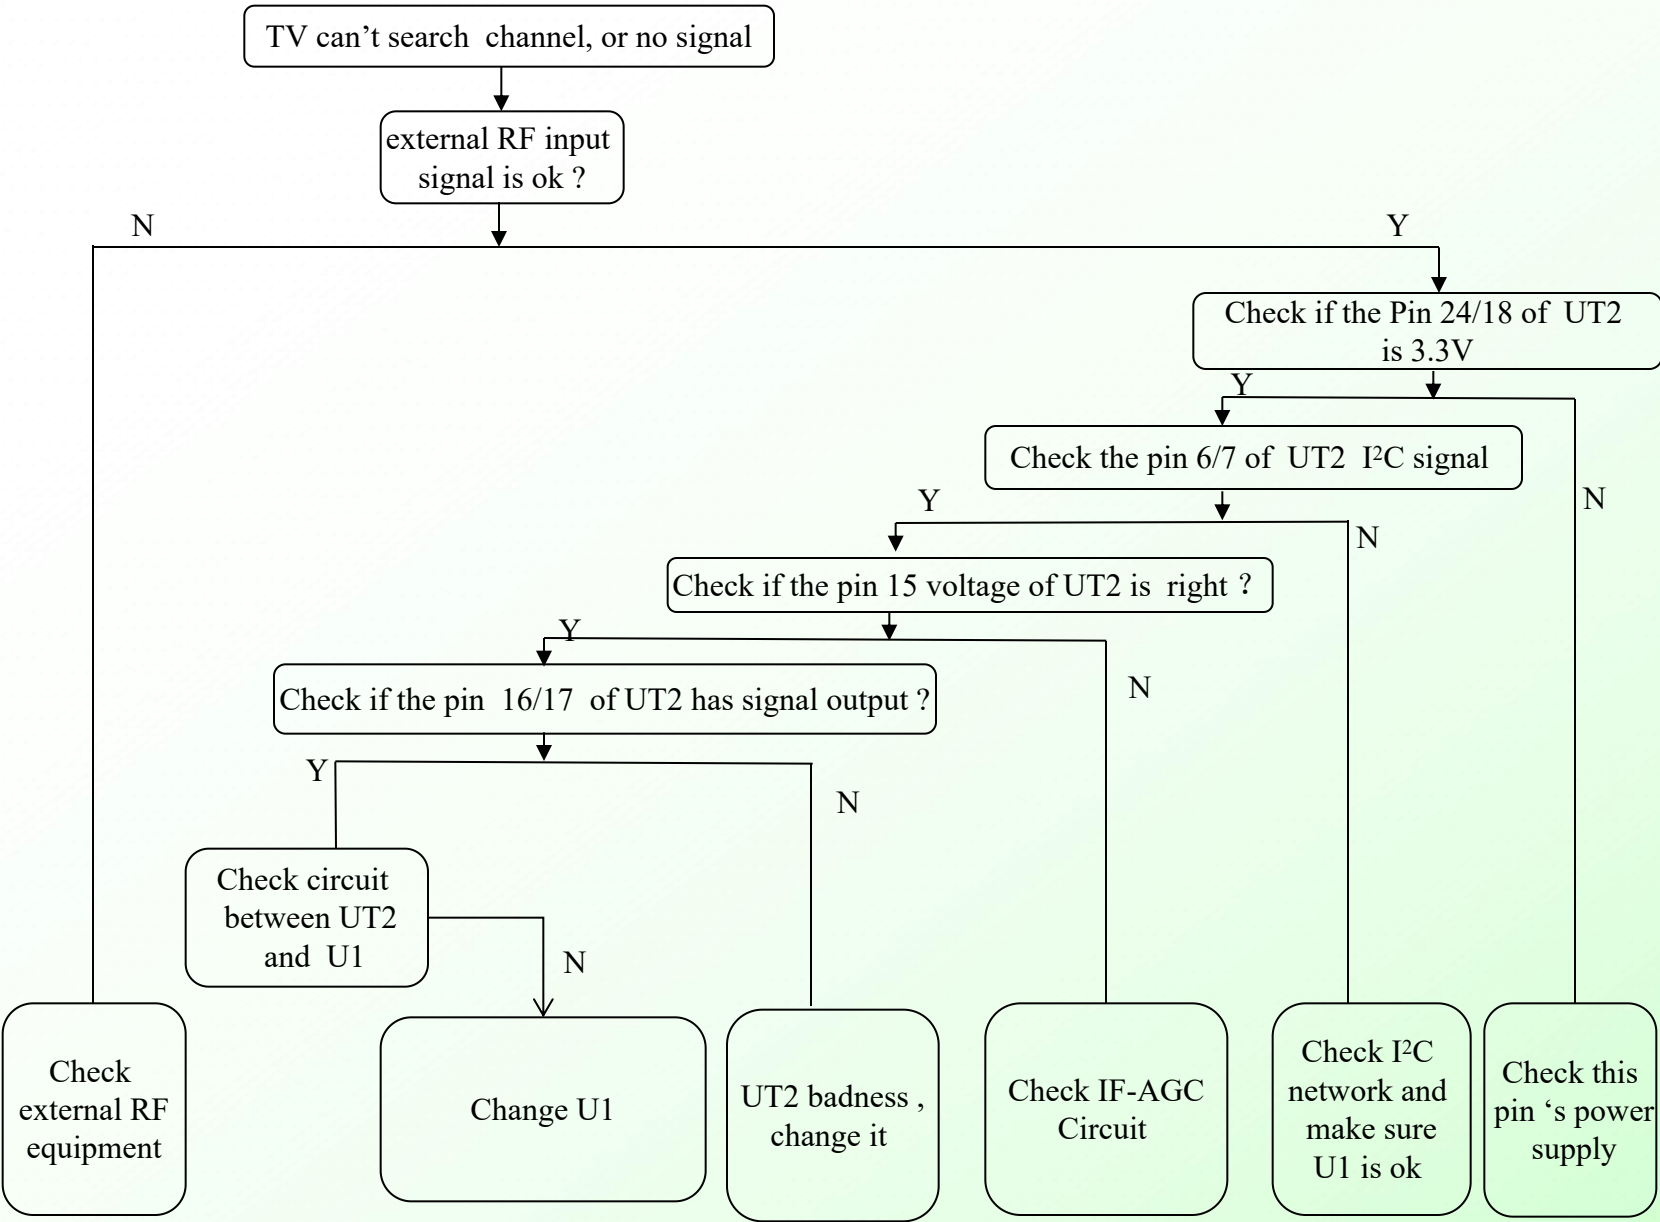

9. Function Troubleshooting (HDMI no sound)

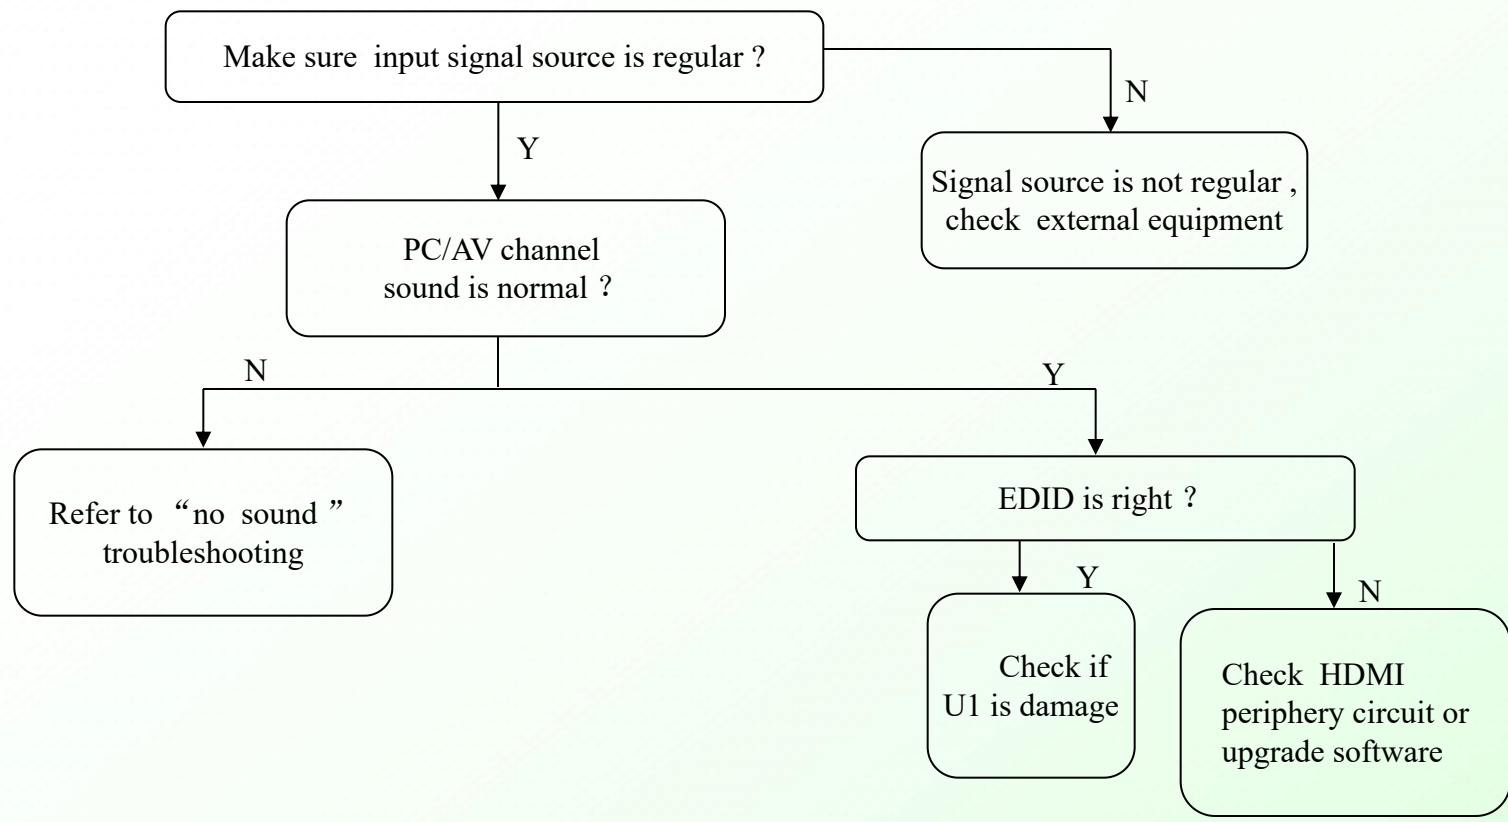

10. Function Troubleshooting (HDMI no picture)

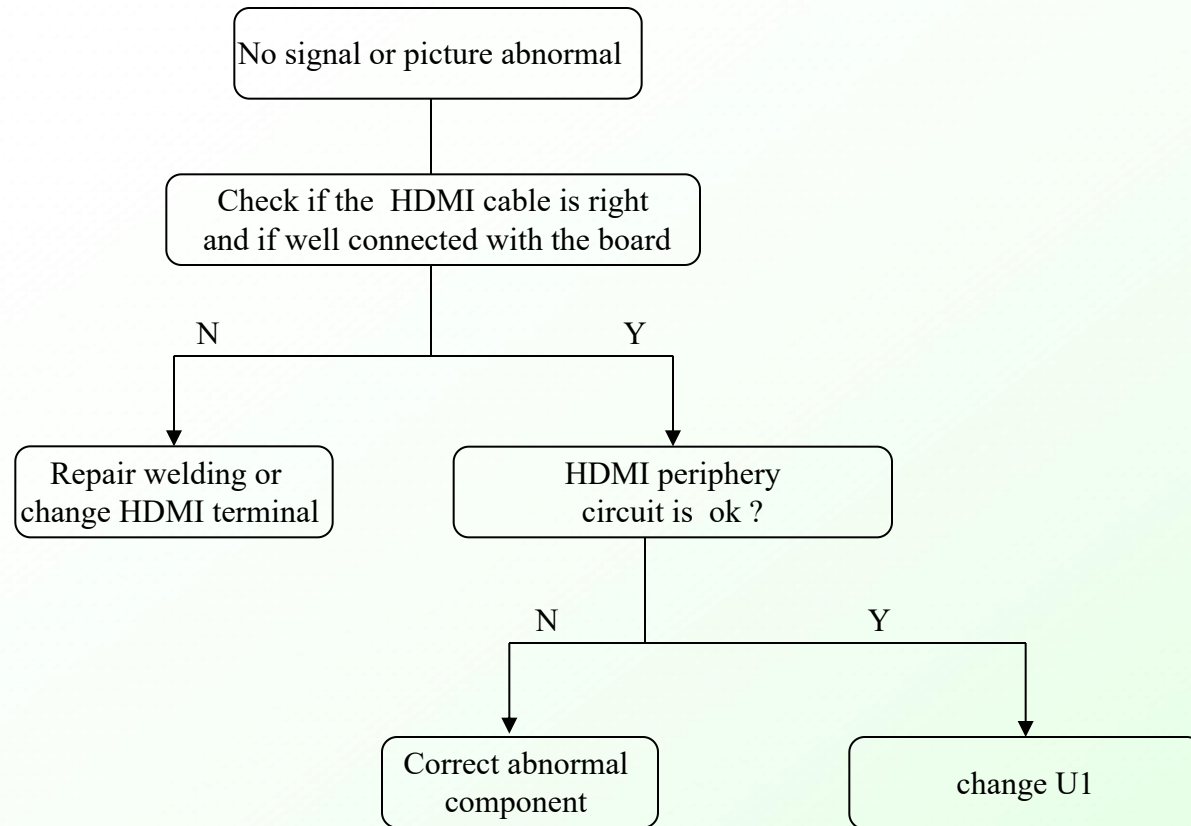

11. Function Troubleshooting (USB)

